




Installer reference guide

## Daikin room air conditioner

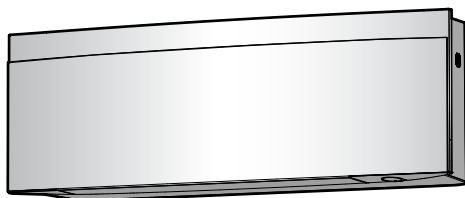

FTXJ20A2V1BW9  
FTXJ25A2V1BW9  
FTXJ35A2V1BW9  
FTXJ42A2V1BW9  
FTXJ50A2V1BW9

FTXJ20A2V1BB9  
FTXJ25A2V1BB9  
FTXJ35A2V1BB9  
FTXJ42A2V1BB9  
FTXJ50A2V1BB9

FTXJ20A2V1BS9  
FTXJ25A2V1BS9  
FTXJ35A2V1BS9  
FTXJ42A2V1BS9  
FTXJ50A2V1BS9

# Table of Contents

|          |                                                                                            |           |
|----------|--------------------------------------------------------------------------------------------|-----------|
| <b>1</b> | <b>About the documentation</b>                                                             | <b>4</b>  |
| 1.1      | About this document.....                                                                   | 4         |
| 1.1.1    | Meaning of warnings and symbols.....                                                       | 5         |
| <b>2</b> | <b>General safety precautions</b>                                                          | <b>7</b>  |
| 2.1      | For the installer .....                                                                    | 7         |
| 2.1.1    | General.....                                                                               | 7         |
| 2.1.2    | Installation site.....                                                                     | 8         |
| 2.1.3    | Refrigerant — in case of R410A or R32.....                                                 | 11        |
| 2.1.4    | Electrical.....                                                                            | 12        |
| <b>3</b> | <b>Specific installer safety instructions</b>                                              | <b>15</b> |
| <b>4</b> | <b>About the box</b>                                                                       | <b>17</b> |
| 4.1      | Indoor unit.....                                                                           | 17        |
| 4.1.1    | To unpack the indoor unit .....                                                            | 17        |
| 4.1.2    | To remove the accessories from the indoor unit.....                                        | 17        |
| <b>5</b> | <b>About the unit</b>                                                                      | <b>19</b> |
| 5.1      | System layout .....                                                                        | 19        |
| 5.2      | Operation range .....                                                                      | 19        |
| 5.3      | About the wireless LAN .....                                                               | 20        |
| 5.3.1    | Precautions when using the wireless LAN.....                                               | 20        |
| 5.3.2    | Basic parameters .....                                                                     | 20        |
| 5.3.3    | Setting the wireless LAN .....                                                             | 20        |
| <b>6</b> | <b>Unit installation</b>                                                                   | <b>22</b> |
| 6.1      | Preparing the installation site.....                                                       | 22        |
| 6.1.1    | Installation site requirements of the indoor unit.....                                     | 22        |
| 6.2      | Opening the unit .....                                                                     | 24        |
| 6.2.1    | To open the front panel.....                                                               | 24        |
| 6.2.2    | To remove the front panel .....                                                            | 24        |
| 6.2.3    | To open the service cover .....                                                            | 25        |
| 6.2.4    | To remove the front grille .....                                                           | 25        |
| 6.2.5    | To remove the electrical wiring box cover .....                                            | 26        |
| 6.3      | Mounting the indoor unit.....                                                              | 27        |
| 6.3.1    | To install the mounting plate .....                                                        | 27        |
| 6.3.2    | To drill a wall hole .....                                                                 | 28        |
| 6.3.3    | To remove the pipe port cover.....                                                         | 29        |
| 6.4      | Connecting the drain piping.....                                                           | 29        |
| 6.4.1    | General guidelines .....                                                                   | 29        |
| 6.4.2    | To connect the piping on right side, right-back, or right-bottom.....                      | 30        |
| 6.4.3    | To connect the piping on left side, left-back, or left-bottom .....                        | 31        |
| 6.4.4    | To check for water leaks .....                                                             | 32        |
| <b>7</b> | <b>Piping installation</b>                                                                 | <b>33</b> |
| 7.1      | Preparing refrigerant piping.....                                                          | 33        |
| 7.1.1    | Refrigerant piping requirements.....                                                       | 33        |
| 7.1.2    | Refrigerant piping insulation .....                                                        | 34        |
| 7.2      | Connecting the refrigerant piping.....                                                     | 34        |
| 7.2.1    | About connecting the refrigerant piping .....                                              | 34        |
| 7.2.2    | Precautions when connecting the refrigerant piping .....                                   | 34        |
| 7.2.3    | Guidelines when connecting the refrigerant piping .....                                    | 35        |
| 7.2.4    | Pipe bending guidelines.....                                                               | 36        |
| 7.2.5    | To flare the pipe end .....                                                                | 36        |
| 7.2.6    | To connect the refrigerant piping to the indoor unit .....                                 | 37        |
| 7.2.7    | To check refrigerant piping joints for leaks after charging refrigerant .....              | 37        |
| <b>8</b> | <b>Electrical installation</b>                                                             | <b>39</b> |
| 8.1      | About connecting the electrical wiring.....                                                | 39        |
| 8.1.1    | Precautions when connecting the electrical wiring .....                                    | 39        |
| 8.1.2    | Guidelines when connecting the electrical wiring.....                                      | 40        |
| 8.1.3    | Specifications of standard wiring components .....                                         | 42        |
| 8.2      | To connect the electrical wiring to the indoor unit.....                                   | 42        |
| 8.3      | To connect optional accessories (wired user interface, central user interface, etc.) ..... | 43        |
| <b>9</b> | <b>Finishing the indoor unit installation</b>                                              | <b>45</b> |

|           |                                                                                  |           |
|-----------|----------------------------------------------------------------------------------|-----------|
| 9.1       | To insulate the drain piping, refrigerant piping and interconnection cable ..... | 45        |
| 9.2       | To pass the pipes through the wall hole .....                                    | 45        |
| 9.3       | To fix the unit on the mounting plate .....                                      | 46        |
| 9.4       | Closing the unit .....                                                           | 46        |
| 9.4.1     | To re-install the front grille .....                                             | 46        |
| 9.4.2     | To close the service cover .....                                                 | 46        |
| 9.4.3     | To re-install the front panel .....                                              | 47        |
| 9.4.4     | To close the front panel .....                                                   | 47        |
| 9.4.5     | To install the screw covers .....                                                | 47        |
| <b>10</b> | <b>Commissioning .....</b>                                                       | <b>48</b> |
| 10.1      | Overview: Commissioning .....                                                    | 48        |
| 10.2      | Checklist before commissioning .....                                             | 48        |
| 10.3      | To perform a test run .....                                                      | 49        |
| 10.3.1    | To perform a test run using the wireless remote control .....                    | 49        |
| <b>11</b> | <b>Configuration .....</b>                                                       | <b>51</b> |
| <b>12</b> | <b>Hand-over to the user .....</b>                                               | <b>52</b> |
| <b>13</b> | <b>Troubleshooting .....</b>                                                     | <b>53</b> |
| 13.1      | Solving problems based on error codes .....                                      | 53        |
| <b>14</b> | <b>Disposal .....</b>                                                            | <b>56</b> |
| <b>15</b> | <b>Technical data .....</b>                                                      | <b>57</b> |
| 15.1      | Wiring diagram .....                                                             | 57        |
| 15.1.1    | Unified wiring diagram legend .....                                              | 57        |
| <b>16</b> | <b>Glossary .....</b>                                                            | <b>60</b> |

# 1 About the documentation

## 1.1 About this document



### WARNING

Make sure installation, servicing, maintenance, repair and applied materials follow the instructions from Daikin (including all documents listed in "Documentation set") and, in addition, comply with applicable legislation and are performed by qualified persons only. In Europe and areas where IEC standards apply, EN/IEC 60335-2-40 is the applicable standard.



### INFORMATION

Make sure that the user has the printed documentation and ask him/her to keep it for future reference.

### Target audience

Authorised installers



### INFORMATION

This appliance is intended to be used by expert or trained users in shops, in light industry, and on farms, or for commercial and household use by lay persons.

### Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
  - Safety instructions that you **MUST** read before installing
  - Format: Paper (in the box of the indoor unit)
- **Indoor unit installation manual:**
  - Installation instructions
  - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
  - Preparation of the installation, good practices, reference data,...
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

Scan the QR code below to find the full documentation set and more information about your product on the Daikin website.

FTXJ-AB9



FTXJ-AS9



FTXJ-AW9



The original instructions are written in English. All other languages are translations of the original instructions.

### Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

#### 1.1.1 Meaning of warnings and symbols

|                                                                                     |                                                                                                                                                     |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>DANGER</b><br>Indicates a situation that results in death or serious injury.                                                                     |
|    | <b>DANGER: RISK OF ELECTROCUTION</b><br>Indicates a situation that could result in electrocution.                                                   |
|    | <b>DANGER: RISK OF BURNING/SCALDING</b><br>Indicates a situation that could result in burning/scalding because of extreme hot or cold temperatures. |
|    | <b>DANGER: RISK OF EXPLOSION</b><br>Indicates a situation that could result in explosion.                                                           |
|   | <b>WARNING</b><br>Indicates a situation that could result in death or serious injury.                                                               |
|  | <b>WARNING: FLAMMABLE MATERIAL</b>                                                                                                                  |
|  | <b>CAUTION</b><br>Indicates a situation that could result in minor or moderate injury.                                                              |
|  | <b>NOTICE</b><br>Indicates a situation that could result in equipment or property damage.                                                           |
|  | <b>INFORMATION</b><br>Indicates useful tips or additional information.                                                                              |

Symbols used on the unit:

| Symbol                                                                              | Explanation                                                                                        |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|
|  | Before installation, read the installation and operation manual, and the wiring instruction sheet. |
|  | Before performing maintenance and service tasks, read the service manual.                          |
|  | For more information, see the installer and user reference guide.                                  |
|  | The unit contains rotating parts. Be careful when servicing or inspecting the unit.                |

Symbols used in the documentation:

| Symbol                                                                            | Explanation                                                                                                         |
|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
|  | Indicates a figure title or a reference to it.<br><b>Example:</b> "1-3 Figure title" means "Figure 3 in chapter 1". |
|  | Indicates a table title or a reference to it.<br><b>Example:</b> "1-3 Table title" means "Table 3 in chapter 1".    |

## 2 General safety precautions

### 2.1 For the installer

#### 2.1.1 General

If you are NOT sure how to install or operate the unit, contact your dealer.



#### **DANGER: RISK OF BURNING/SCALDING**

- Do NOT touch the refrigerant piping, water piping or internal parts during and immediately after operation. It could be too hot or too cold. Give it time to return to normal temperature. If you MUST touch it, wear protective gloves.
- Do NOT touch any accidental leaking refrigerant.



#### **WARNING**

Improper installation or attachment of equipment or accessories could result in electrical shock, short-circuit, leaks, fire or other damage to the equipment. ONLY use accessories, optional equipment and spare parts made or approved by Daikin unless otherwise specified.



#### **WARNING**

Make sure installation, testing and applied materials comply with applicable legislation (on top of the instructions described in the Daikin documentation).



#### **WARNING**

Tear apart and throw away plastic packaging bags so that nobody, especially children, can play with them. **Possible consequence:** suffocation.



#### **WARNING**

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.



#### **CAUTION**

Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.



#### **CAUTION**

Do NOT touch the air inlet or aluminium fins of the unit.



#### **CAUTION**

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.

In accordance with the applicable legislation, it might be necessary to provide a logbook with the product containing at least: information on maintenance, repair work, results of tests, stand-by periods,...

Also, at least, following information MUST be provided at an accessible place at the product:

- Instructions for shutting down the system in case of an emergency
- Name and address of fire department, police and hospital
- Name, address and day and night telephone numbers for obtaining service

In Europe, EN378 provides the necessary guidance for this logbook.

### 2.1.2 Installation site

- Provide sufficient space around the unit for servicing and air circulation.
- Make sure the installation site withstands the weight and vibration of the unit.
- Make sure the area is well ventilated. Do NOT block any ventilation openings.
- Make sure the unit is level.

Do NOT install the unit in the following places:

- In potentially explosive atmospheres.
- In places where there is machinery that emits electromagnetic waves. Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.
- In places where there is a risk of fire due to the leakage of flammable gases (example: thinner or gasoline), carbon fibre, ignitable dust.
- In places where corrosive gas (example: sulphurous acid gas) is produced. Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.
- In bathrooms.

### Instructions for equipment using R32 refrigerant



A2L

#### **WARNING: MILDLY FLAMMABLE MATERIAL**

The refrigerant inside this unit is mildly flammable.



#### **WARNING**

- Do NOT pierce or burn refrigerant cycle parts.
- Do NOT use cleaning materials or means to accelerate the defrosting process other than those recommended by the manufacturer.
- Be aware that the refrigerant inside the system is odourless.



#### **WARNING**

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater) and have a room size as specified below.



#### **WARNING**

Make sure installation, servicing, maintenance and repair comply with instructions from Daikin and with applicable legislation (for example national gas regulation) and are executed ONLY by authorised persons.

**WARNING**

- Take precautions to avoid excessive vibration or pulsation to refrigeration piping.
- Protect the protection devices, piping and fittings as much as possible against adverse environmental effects.
- Provide space for expansion and contraction of long runs of piping.
- Design and install piping in refrigerating systems such as to minimise the likelihood of hydraulic shock damaging the system.
- Mount the indoor equipment and pipes securely and protect them to avoid accidental rupture of equipment or pipes in case of events such as moving furniture or reconstruction activities.

**WARNING**

If one or more rooms are connected to the unit using a duct system, make sure:

- there are no operating ignition sources (example: open flames, an operating gas appliance or an operating electric heater) in case the floor area is less than the minimum floor area A (m<sup>2</sup>).
- no auxiliary devices, which may be a potential ignition source, are installed in the duct work (example: hot surfaces with a temperature exceeding 700°C and electric switching device);
- only auxiliary devices approved by the manufacturer are used in the duct work;
- air inlet AND outlet are connected directly to the same room by ducting. Do NOT use spaces such as a false ceiling as a duct for the air inlet or outlet.

**CAUTION**

Do NOT use potential sources of ignition in searching for or detection of refrigerant leaks.

**NOTICE**

- Do NOT re-use joints and copper gaskets which have been used already.
- Joints made in the installation between parts of the refrigerant system shall be accessible for maintenance purposes.

**Installation space requirements****WARNING**

If appliances contain R32 refrigerant, the floor area of the room in which the appliances are installed, operated and stored **MUST** be larger than the minimum floor area defined in table below A (m<sup>2</sup>). This applies to:

- Indoor units **without** a refrigerant leakage sensor; in case of indoor units **with** refrigerant leakage sensor, consult the installation manual
- Outdoor units installed or stored indoors (e.g. winter garden, garage, machinery room)

**NOTICE**

- The pipework shall be securely mounted and guarded protected from physical damage.
- Keep the pipework installation to a minimum.

**To determine the minimum floor area**

- 1 Determine the total refrigerant charge in the system (= factory refrigerant charge ❶ + ❷ additional refrigerant amount charged).




## 2 Determine which graph or table to use.

- For indoor units: Is the unit ceiling-mounted, wall-mounted or floor-standing?
- For outdoor units installed or stored indoors, this depends on the installation height:

| If the installation height is... | Then use the graph or table for... |
|----------------------------------|------------------------------------|
| <1.8 m                           | Floor-standing units               |
| 1.8≤x<2.2 m                      | Wall-mounted units                 |
| ≥2.2 m                           | Ceiling-mounted units              |

## 3 Use the graph or table to determine the minimum floor area.

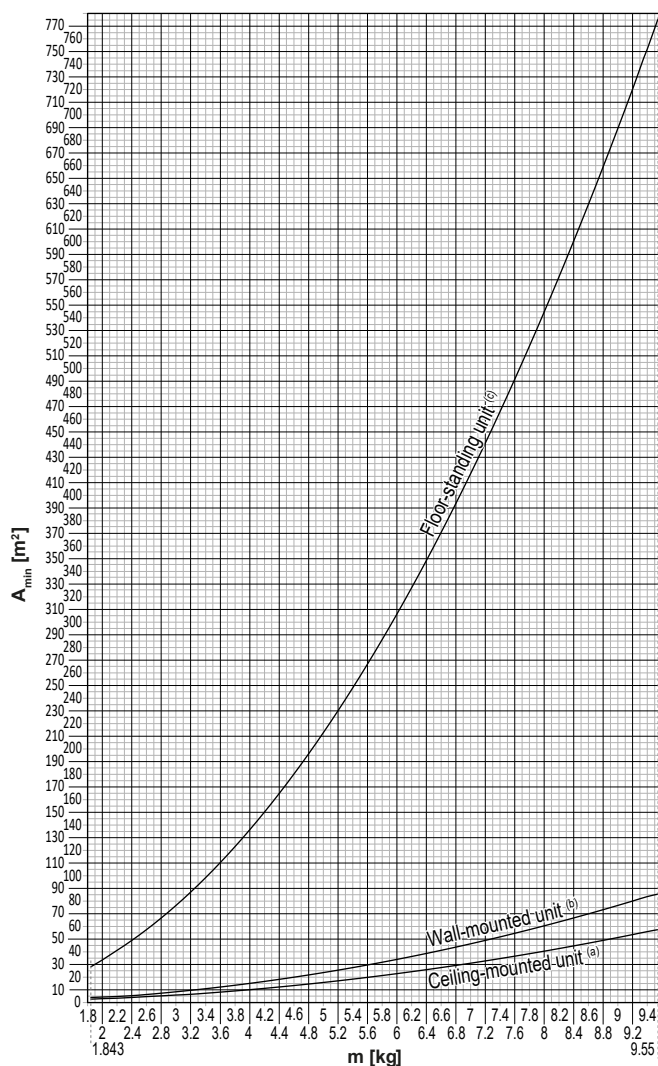

| Ceiling-mounted unit <sup>(a)</sup> |                                    | Wall-mounted unit <sup>(b)</sup> |                                    | Floor-standing unit <sup>(c)</sup> |                                    |
|-------------------------------------|------------------------------------|----------------------------------|------------------------------------|------------------------------------|------------------------------------|
| m (kg)                              | A <sub>min</sub> (m <sup>2</sup> ) | m (kg)                           | A <sub>min</sub> (m <sup>2</sup> ) | m (kg)                             | A <sub>min</sub> (m <sup>2</sup> ) |
| ≤1.842                              | —                                  | ≤1.842                           | —                                  | ≤1.842                             | —                                  |
| 1.843                               | 3.64                               | 1.843                            | 4.45                               | 1.843                              | 28.9                               |
| 2.0                                 | 3.95                               | 2.0                              | 4.83                               | 2.0                                | 34.0                               |
| 2.2                                 | 4.34                               | 2.2                              | 5.31                               | 2.2                                | 41.2                               |
| 2.4                                 | 4.74                               | 2.4                              | 5.79                               | 2.4                                | 49.0                               |
| 2.6                                 | 5.13                               | 2.6                              | 6.39                               | 2.6                                | 57.5                               |
| 2.8                                 | 5.53                               | 2.8                              | 7.41                               | 2.8                                | 66.7                               |
| 3.0                                 | 5.92                               | 3.0                              | 8.51                               | 3.0                                | 76.6                               |
| 3.2                                 | 6.48                               | 3.2                              | 9.68                               | 3.2                                | 87.2                               |
| 3.4                                 | 7.32                               | 3.4                              | 10.9                               | 3.4                                | 98.4                               |
| 3.6                                 | 8.20                               | 3.6                              | 12.3                               | 3.6                                | 110                                |
| 3.8                                 | 9.14                               | 3.8                              | 13.7                               | 3.8                                | 123                                |
| 4.0                                 | 10.1                               | 4.0                              | 15.1                               | 4.0                                | 136                                |
| 4.2                                 | 11.2                               | 4.2                              | 16.7                               | 4.2                                | 150                                |
| 4.4                                 | 12.3                               | 4.4                              | 18.3                               | 4.4                                | 165                                |
| 4.6                                 | 13.4                               | 4.6                              | 20.0                               | 4.6                                | 180                                |
| 4.8                                 | 14.6                               | 4.8                              | 21.8                               | 4.8                                | 196                                |
| 5.0                                 | 15.8                               | 5.0                              | 23.6                               | 5.0                                | 213                                |
| 5.2                                 | 17.1                               | 5.2                              | 25.6                               | 5.2                                | 230                                |
| 5.4                                 | 18.5                               | 5.4                              | 27.6                               | 5.4                                | 248                                |
| 5.6                                 | 19.9                               | 5.6                              | 29.7                               | 5.6                                | 267                                |
| 5.8                                 | 21.3                               | 5.8                              | 31.8                               | 5.8                                | 286                                |
| 6.0                                 | 22.8                               | 6.0                              | 34.0                               | 6.0                                | 306                                |
| 6.2                                 | 24.3                               | 6.2                              | 36.4                               | 6.2                                | 327                                |
| 6.4                                 | 25.9                               | 6.4                              | 38.7                               | 6.4                                | 349                                |
| 6.6                                 | 27.6                               | 6.6                              | 41.2                               | 6.6                                | 371                                |
| 6.8                                 | 29.3                               | 6.8                              | 43.7                               | 6.8                                | 394                                |
| 7.0                                 | 31.0                               | 7.0                              | 46.3                               | 7.0                                | 417                                |
| 7.2                                 | 32.8                               | 7.2                              | 49.0                               | 7.2                                | 441                                |
| 7.4                                 | 34.7                               | 7.4                              | 51.8                               | 7.4                                | 466                                |
| 7.6                                 | 36.6                               | 7.6                              | 54.6                               | 7.6                                | 492                                |
| 7.8                                 | 38.5                               | 7.8                              | 57.5                               | 7.8                                | 518                                |
| 8                                   | 40.5                               | 8                                | 60.5                               | 8                                  | 545                                |
| 8.2                                 | 42.6                               | 8.2                              | 63.6                               | 8.2                                | 572                                |
| 8.4                                 | 44.7                               | 8.4                              | 66.7                               | 8.4                                | 601                                |
| 8.6                                 | 46.8                               | 8.6                              | 69.9                               | 8.6                                | 629                                |
| 8.8                                 | 49.0                               | 8.8                              | 73.2                               | 8.8                                | 659                                |
| 9                                   | 51.3                               | 9                                | 76.6                               | 9                                  | 689                                |
| 9.2                                 | 53.6                               | 9.2                              | 80.0                               | 9.2                                | 720                                |
| 9.4                                 | 55.9                               | 9.4                              | 83.6                               | 9.4                                | 752                                |
| 9.55                                | 57.7                               | 9.55                             | 86.2                               | 9.55                               | 776                                |

- m** Total refrigerant charge in the system  
**A<sub>min</sub>** Minimum floor area  
**(a)** Ceiling-mounted unit (= Ceiling-mounted unit)  
**(b)** Wall-mounted unit (= Wall-mounted unit)  
**(c)** Floor-standing unit (= Floor-standing unit)

## 2.1.3 Refrigerant — in case of R410A or R32

If applicable. See the installation manual or installer reference guide of your application for more information.

**DANGER: RISK OF EXPLOSION**

**Pump down – Refrigerant leakage.** If you want to pump down the system, and there is a leak in the refrigerant circuit:

- Do NOT use the unit's automatic pump down function, with which you can collect all refrigerant from the system into the outdoor unit. **Possible consequence:** Self-combustion and explosion of the compressor because of air going into the operating compressor.
- Use a separate recovery system so that the unit's compressor does NOT have to operate.

**WARNING**

During tests, NEVER pressurise the product with a pressure higher than the maximum allowable pressure (as indicated on the nameplate of the unit).

**WARNING**

Take sufficient precautions in case of refrigerant leakage. If refrigerant gas leaks, ventilate the area immediately. Possible risks:

- Excessive refrigerant concentrations in a closed room can lead to oxygen deficiency.
- Toxic gas might be produced if refrigerant gas comes into contact with fire.

**WARNING**

ALWAYS recover the refrigerant. Do NOT release them directly into the environment. Use a vacuum pump to evacuate the installation.

**WARNING**

Make sure there is no oxygen in the system. Refrigerant may ONLY be charged after performing the leak test and the vacuum drying.

**Possible consequence:** Self-combustion and explosion of the compressor because of oxygen going into the operating compressor.

**NOTICE**

- To avoid compressor breakdown, do NOT charge more than the specified amount of refrigerant.
- When the refrigerant system is to be opened, refrigerant MUST be treated according to the applicable legislation.

**NOTICE**

Make sure refrigerant piping installation complies with applicable legislation. In Europe, EN378 is the applicable standard.

**NOTICE**

Make sure the field piping and connections are NOT subjected to stress.



### NOTICE

After all the piping has been connected, make sure there is no gas leak. Use nitrogen to perform a gas leak detection.

- In case recharge is required, see the nameplate or the refrigerant charge label of the unit. It states the type of refrigerant and necessary amount.
- Whether the unit is factory charged with refrigerant or non-charged, in both cases you might need to charge additional refrigerant, depending on the pipe sizes and pipe lengths of the system.
- **ONLY** use tools exclusively for the refrigerant type used in the system, this to ensure pressure resistance and prevent foreign materials from entering into the system.
- Charge the liquid refrigerant as follows:

| If                                                                                               | Then                                                                                                                          |
|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| A siphon tube is present<br>(i.e., the cylinder is marked with "Liquid filling siphon attached") | Charge with the cylinder upright.<br>      |
| A siphon tube is NOT present                                                                     | Charge with the cylinder upside down.<br> |

- Open refrigerant cylinders slowly.
- Charge the refrigerant in liquid form. Adding it in gas form may prevent normal operation.



### CAUTION

When the refrigerant charging procedure is done or when pausing, close the valve of the refrigerant tank immediately. If the valve is **NOT** closed immediately, remaining pressure might charge additional refrigerant. **Possible consequence:** Incorrect refrigerant amount.

### 2.1.4 Electrical



### DANGER: RISK OF ELECTROCUTION

- Turn OFF all power supply before removing the switch box cover, connecting electrical wiring or touching electrical parts.
- Disconnect the power supply for more than 10 minutes, and measure the voltage at the terminals of main circuit capacitors or electrical components before servicing. The voltage **MUST** be less than 50 V DC before you can touch electrical components. For the location of the terminals, see the wiring diagram.
- Do **NOT** touch electrical components with wet hands.
- Do **NOT** leave the unit unattended when the service cover is removed.



### WARNING

If **NOT** factory installed, a main switch or other means for disconnection, having a contact separation in all poles providing full disconnection under overvoltage category III condition, **MUST** be installed in the fixed wiring.

**WARNING**

- ONLY use copper wires.
- Make sure the field wiring complies with the national wiring regulations.
- All field wiring MUST be performed in accordance with the wiring diagram supplied with the product.
- NEVER squeeze bundled cables and make sure they do NOT come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections.
- Make sure to install earth wiring. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earth may cause electrical shock.
- Make sure to use a dedicated power circuit. NEVER use a power supply shared by another appliance.
- Make sure to install the required fuses or circuit breakers.
- Make sure to install an earth leakage protector. Failure to do so may cause electrical shock or fire.
- When installing the earth leakage protector, make sure it is compatible with the inverter (resistant to high frequency electric noise) to avoid unnecessary opening of the earth leakage protector.

**WARNING**

- After finishing the electrical work, confirm that each electrical component and terminal inside the switch box is connected securely.
- Make sure all covers are closed before starting up the unit.

**CAUTION**

- When connecting the power supply: connect the earth cable first, before making the current-carrying connections.
- When disconnecting the power supply: disconnect the current-carrying cables first, before separating the earth connection.
- The length of the conductors between the power supply stress relief and the terminal block itself MUST be as such that the current-carrying wires are tightened before the earth wire is in case the power supply is pulled loose from the stress relief.

**NOTICE**

Precautions when laying power wiring:



- Do NOT connect wiring of different thicknesses to the power terminal block (slack in the power wiring may cause abnormal heat).
- When connecting wiring which is the same thickness, do as shown in the figure above.
- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will damage the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.

Install power cables at least 1 meter away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 1 meter may NOT be sufficient.

**NOTICE**

ONLY applicable if the power supply is three-phase, and the compressor has an ON/OFF starting method.

If there exists the possibility of reversed phase after a momentary black out and the power goes ON and OFF while the product is operating, attach a reversed phase protection circuit locally. Running the product in reversed phase can break the compressor and other parts.

## 3 Specific installer safety instructions

Always observe the following safety instructions and regulations.

### Unit installation (see "6 Unit installation" [▶ 22])



#### WARNING

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.



#### WARNING

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.



#### CAUTION

For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.

### Piping installation (see "7 Piping installation" [▶ 33])



A2L

#### WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.



#### CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.



#### DANGER: RISK OF BURNING/SCALDING



#### CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

### Electrical installation (see "8 Electrical installation" [▶ 39])



#### DANGER: RISK OF ELECTROCUTION



#### WARNING

ALWAYS use multicore cable for power supply cables.



#### WARNING

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.



#### WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do **NOT** earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shocks.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do **NOT** come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do **NOT** use taped wires, extension cords, or connections from a star system. They can cause overheating, electrical shocks or fire.
- Do **NOT** install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.



#### WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



#### WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



#### WARNING

Do **NOT** connect the power supply to the indoor unit. This could result in electrical shock or fire.



#### WARNING

- Do **NOT** use locally purchased electrical parts inside the product.
- Do **NOT** branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



#### WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

## 4 About the box

Keep the following in mind:

- At delivery, the unit **MUST** be checked for damage and completeness. Any damage or missing parts **MUST** be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Prepare in advance the path along which you want to bring the unit to its final installation position.
- When handling the unit, take into account the following:




Fragile, handle the unit with care.



Keep the unit upright in order to avoid damage.

### 4.1 Indoor unit


#### 4.1.1 To unpack the indoor unit

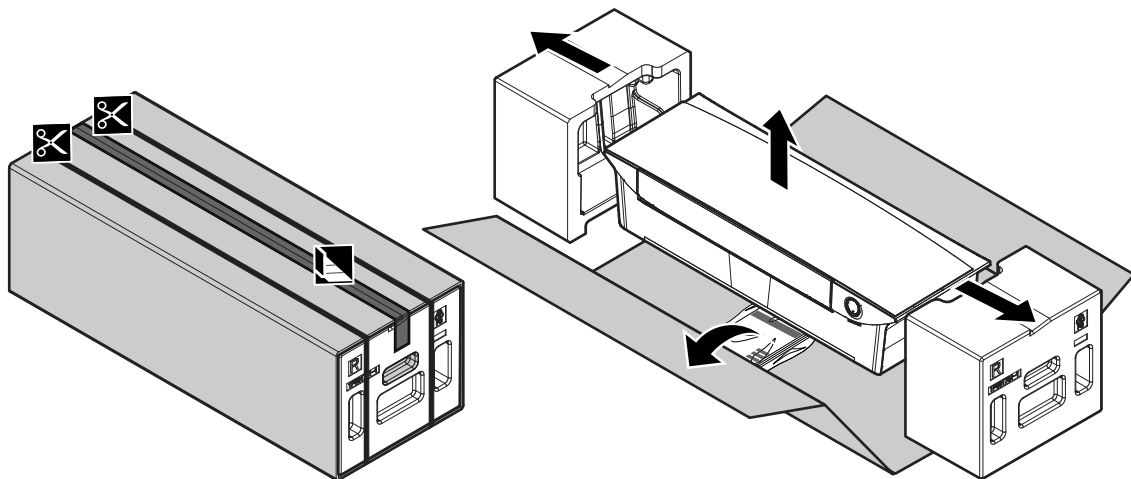

#### 4.1.2 To remove the accessories from the indoor unit

##### 1 Remove:

- the accessory bag located at the bottom of the package,
- the mounting plate attached to the back of the indoor unit,
- the spare SSID sticker located on the front grille.

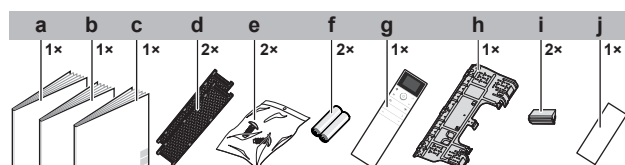

- a** Installation manual
- b** Operation manual
- c** General safety precautions
- d** Titanium apatite deodorising filter and silver particle filter (Ag-ion filter)
- e** Indoor unit fixing screw (M4×12L). Refer to ["9.3 To fix the unit on the mounting plate"](#) [▶ 46].
- f** Dry battery AAA.LR03 (alkaline) for the wireless remote control
- g** Wireless remote control with holder

- h** Mounting plate (attached on the unit)
- i** Screw cover
- j** Spare SSID sticker with release paper (attached to the unit)

- **Spare SSID sticker.** Do NOT throw away the spare sticker. Keep it in a safe place in case it is needed in future (e.g. in case the front grille was replaced attach it to the new front grille).

## 5 About the unit




A2L

### WARNING: MILDLY FLAMMABLE MATERIAL

The refrigerant inside this unit is mildly flammable.

### 5.1 System layout

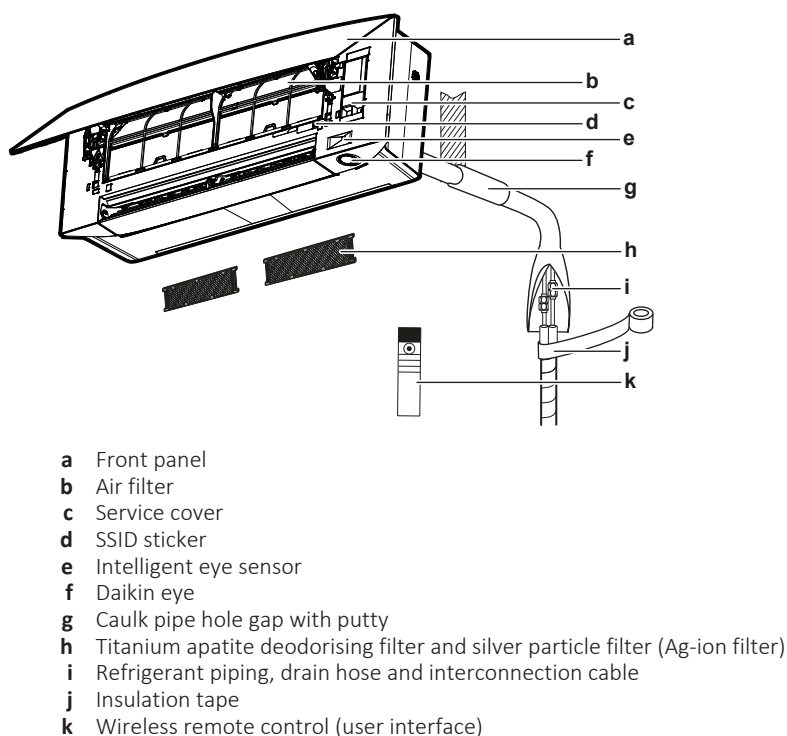

### 5.2 Operation range

Use the system in the following temperature and humidity ranges for safe and effective operation.

|                                                       | Cooling and drying <sup>(a)(b)</sup> | Heating <sup>(a)</sup>     |
|-------------------------------------------------------|--------------------------------------|----------------------------|
| Outdoor temperature for RXJ models                    | −10~50°C DB                          | −20~24°C DB<br>−21~18°C WB |
| Outdoor temperature for 2MXM, 3MXM, 4MXM, 5MXM models | −10~46°C DB                          | −15~24°C DB<br>−15~18°C WB |
| Indoor temperature                                    | 18~37°C DB<br>14~28°C WB             | 10~30°C DB                 |
| Indoor humidity                                       | ≤80% <sup>(a)</sup>                  | —                          |

<sup>(a)</sup> A safety device might stop the operation of the system if the unit runs outside its operation range.

<sup>(b)</sup> Condensation and water dripping might occur if the unit runs outside its operation range.

### 5.3 About the wireless LAN

For detailed specifications, installation instructions, setting methods, FAQ, declaration of conformity and the latest version of this manual, visit [app.daikineurope.com](http://app.daikineurope.com).



#### 5.3.1 Precautions when using the wireless LAN

Do NOT use near:

- **Medical equipment.** E.g. persons using cardiac pacemakers or defibrillators. This product may cause electromagnetic interference.
- **Auto-control equipment.** E.g. automatic doors or fire alarm equipment. This product may cause faulty behaviour of the equipment.
- **Microwave oven.** It may affect wireless LAN communications.

#### 5.3.2 Basic parameters

| What                     | Value                                      |
|--------------------------|--------------------------------------------|
| Frequency range          | 2400 MHz~2483.5 MHz                        |
| Radio protocol           | IEEE 802.11b/g/n                           |
| Radio frequency channel  | 1~13                                       |
| Output power             | 13 dBm                                     |
| Effective radiated power | 15 dBm (11b) / 14 dBm (11g) / 14 dBm (11n) |
| Power supply             | DC 14 V / 100 mA                           |

#### 5.3.3 Setting the wireless LAN

The customer is responsible for providing:

- Smartphone or tablet with minimum supported version of Android or iOS, specified on [app.daikineurope.com](http://app.daikineurope.com)
- Internet line and communicating device, such as modem, router, etc.
- Wireless LAN access point.
- Installed free ONECTA app.

#### To install the ONECTA app

- 1 Go to Google Play (for Android devices) or the App Store (for iOS devices) and search for "ONECTA".
- 2 Follow the directions on the screen to install the ONECTA app.

#### Search the app directly using the QR on the wireless remote control display

- 1 Enter the main menu by pressing and navigate to the wireless remote control setting menu using and .
- 2 Press to enter the menu.

## Wireless remote control setting menu



- 3 Navigate to the QR code screen using  and .
- 4 Scan the QR code by smartphone or other smart devices.

**Result:** The QR code will re-direct you to the App Store or Google Play.



- 5 Follow the directions on the screen to install.

**INFORMATION**

If the QR code is difficult to read, switch the displayed QR code using  or , then try again.

# 6 Unit installation



**WARNING**

Installation shall be done by an installer, the choice of materials and installation shall comply with the applicable legislation. In Europe, EN378 is the applicable standard.

## In this chapter

|       |                                                                       |    |
|-------|-----------------------------------------------------------------------|----|
| 6.1   | Preparing the installation site .....                                 | 22 |
| 6.1.1 | Installation site requirements of the indoor unit.....                | 22 |
| 6.2   | Opening the unit.....                                                 | 24 |
| 6.2.1 | To open the front panel.....                                          | 24 |
| 6.2.2 | To remove the front panel.....                                        | 24 |
| 6.2.3 | To open the service cover.....                                        | 25 |
| 6.2.4 | To remove the front grille.....                                       | 25 |
| 6.2.5 | To remove the electrical wiring box cover .....                       | 26 |
| 6.3   | Mounting the indoor unit.....                                         | 27 |
| 6.3.1 | To install the mounting plate.....                                    | 27 |
| 6.3.2 | To drill a wall hole .....                                            | 28 |
| 6.3.3 | To remove the pipe port cover .....                                   | 29 |
| 6.4   | Connecting the drain piping .....                                     | 29 |
| 6.4.1 | General guidelines .....                                              | 29 |
| 6.4.2 | To connect the piping on right side, right-back, or right-bottom..... | 30 |
| 6.4.3 | To connect the piping on left side, left-back, or left-bottom .....   | 31 |
| 6.4.4 | To check for water leaks .....                                        | 32 |

## 6.1 Preparing the installation site



**WARNING**

The appliance shall be stored so as to prevent mechanical damage and in a well-ventilated room without continuously operating ignition sources (e.g. open flames, an operating gas appliance, or an operating electric heater). The room size shall be as specified in the General safety precaution.

Choose an installation location with sufficient space to transport the unit in and out of the site.

Do NOT install the unit in places often used as work place. In case of construction works (e.g. grinding works) where a lot of dust is created, the unit MUST be covered.

### 6.1.1 Installation site requirements of the indoor unit



**INFORMATION**

Also read the precautions and requirements in the "[2 General safety precautions](#)" [[▶ 7](#)].



**INFORMATION**

The sound pressure level is less than 70 dBA.

- **Air flow.** Make sure nothing blocks the air flow.
- **Drainage.** Make sure condensation water can be evacuated properly.
- **Wall insulation.** When conditions in the wall exceed 30°C and a relative humidity of 80%, or when fresh air is inducted into the wall, then additional insulation is required (minimum 10 mm thickness, polyethylene foam).

- **Wall strength.** Check whether the wall or the floor is strong enough to support the weight of the unit. If there is a risk, reinforce the wall or the floor before installing the unit.

Install power cables at least 1 metre away from televisions or radios to prevent interference. Depending on the radio waves, a distance of 3 metres may NOT be sufficient.

- Choose a location where the operation noise or the hot/cold air discharged from the unit will not disturb anyone and the location is selected according the applicable legislation.
- **Fluorescent lights.** When installing a wireless remote control (user interface) in a room with fluorescent lights, mind the following to avoid interference:
  - Install the wireless remote control (user interface) as close as possible to the indoor unit.
  - Install the indoor unit as far as possible from the fluorescent lights.

It is NOT recommended to install the unit in the following places because it may shorten the life of the unit:


- Where the voltage fluctuates a lot
- In vehicles or vessels
- Where acidic or alkaline vapour is present
- In places where a mineral oil mist, spray or vapour may be present in the atmosphere. Plastic parts may deteriorate and fall off or cause water leakage.
- In places where the unit would be in the path of direct sunlight.
- In bathrooms.
- Sound sensitive areas (e.g. near a bedroom), so that the operation noise will cause no trouble.



#### NOTICE

Do NOT place objects below the indoor and/or outdoor unit that may get wet. Otherwise condensation on the unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, and objects under the unit may get dirty or damaged.

- **Spacing.** Install the unit at least 1.8 m from the floor and keep the following requirements in mind for distances from the walls and the ceiling:

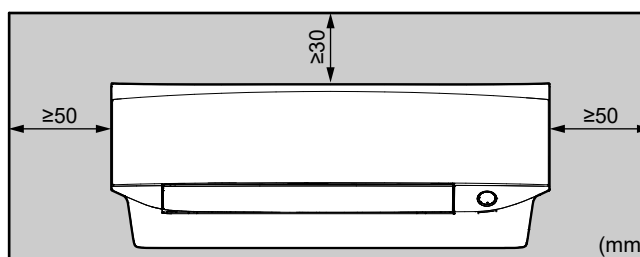


**Note:** Make sure that there are no obstacles within 500 mm under the infrared signal receiver. They may influence reception performance of the wireless remote control.


## 6.2 Opening the unit

### 6.2.1 To open the front panel

- 1 Hold the front panel on both sides and pull it up carefully until it reach the limit position.

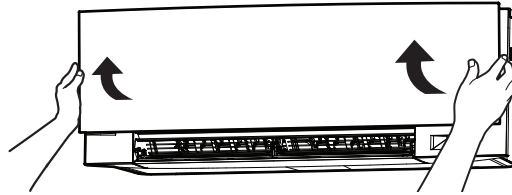

- 2 Pull down both locks on the back of the front panel.
- 3 Open the front panel until the support fits into the fixing tab.

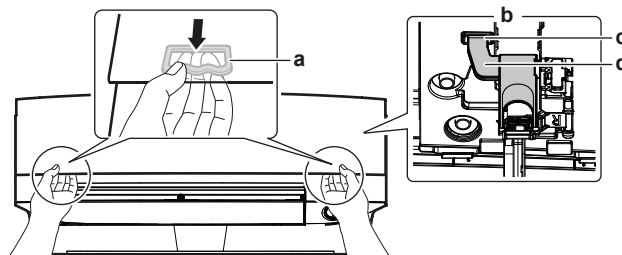

- a Lock (1 on each side)
- b Backside of the front panel
- c Fixing tab
- d Support


### 6.2.2 To remove the front panel



#### INFORMATION


Remove the front panel only in case it MUST be replaced.

- 1 Open the front panel. See "[6.2.1 To open the front panel](#)" [▶ 24].
- 2 Open the panel locks on the back side of the panel (1 on each side).

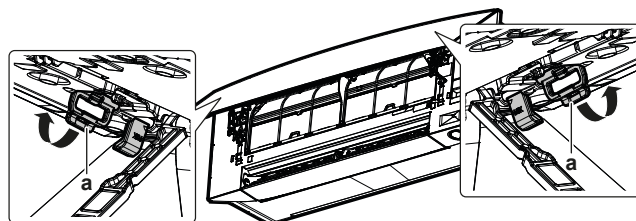


- a Panel lock

- 3 Push the right arm lightly to the right to disconnect the shaft from the shaft slot on the right side.

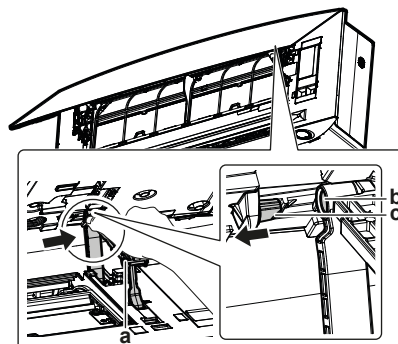

- a Arm
- b Shaft slot
- c Shaft

- 4 Disconnect the front panel shaft from the shaft slot on the left side.

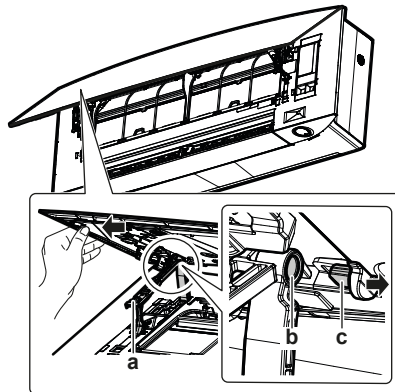


- a Arm
- b Shaft slot
- c Shaft

- 5 Remove the front panel.
- 6 To re-install the front panel, perform the steps in the opposite order.

### 6.2.3 To open the service cover

- 1 Remove 1 screw from the service cover.
- 2 Pull out the service cover horizontally away from the unit.

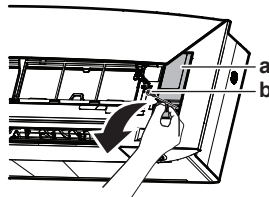

- a Service cover
- b Service cover screw



#### NOTICE

When closing the service cover, make sure that the tightening torque does NOT exceed 1.4 ( $\pm 0.2$ ) N•m.


### 6.2.4 To remove the front grille



#### CAUTION


Wear adequate personal protective equipment (protective gloves, safety glasses,...) when installing, maintaining or servicing the system.

- 1 Open the front panel. Refer to ["6.2.1 To open the front panel"](#) [▶ 24].
- 2 Remove the service cover. Refer to ["6.2.3 To open the service cover"](#) [▶ 25].
- 3 Remove the wire harness from the wire clamp, disconnect the connector and place it in the connector holder.
- 4 Position the flap carefully by hand, so it does not get caught during front grille removal.
- 5 If already installed, remove the 2 screw covers using a long flat plate such as a ruler wrapped in a cloth and remove 2 screws.

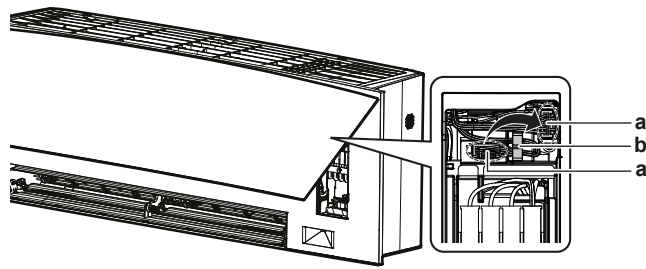

- a Connector
- b Wire clamp


- 6 Push the front grille up and then towards the mounting plate to remove the front grille from the 3 hooks.

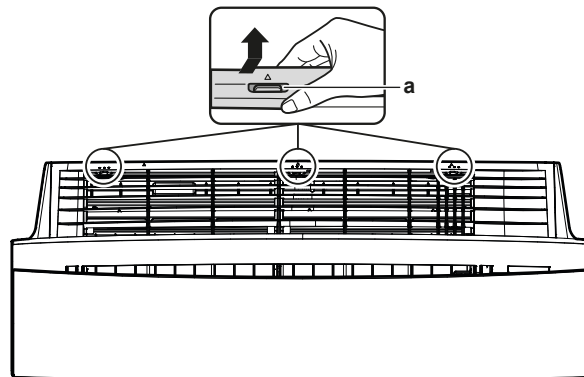

- a Hook

**Prerequisite: If working space is limited.**


- 7 Slide the flat screwdriver in the direction of triangle on the rib into the half-moon shaped dent on the grille.

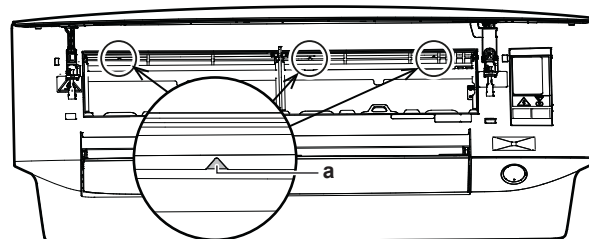

- a Triangle symbol

- 8 Slightly press down the front grille and insert the screwdriver in slot next to the hooks.

- 9 Pull the front grille up using the flat screwdriver and pull towards the front side.

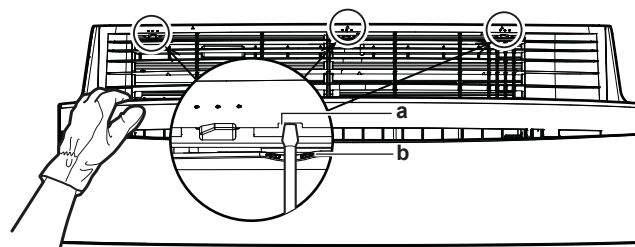


- a Slot
- b Half-moon shaped dent

### 6.2.5 To remove the electrical wiring box cover

**Prerequisite:** Remove the front grille.

- 1 Remove 1 screw from the electrical wiring box.

- 2 Open the electrical wiring box cover by pulling it to the front.
- 3 Remove the electrical wiring box cover from the 2 rear hooks.

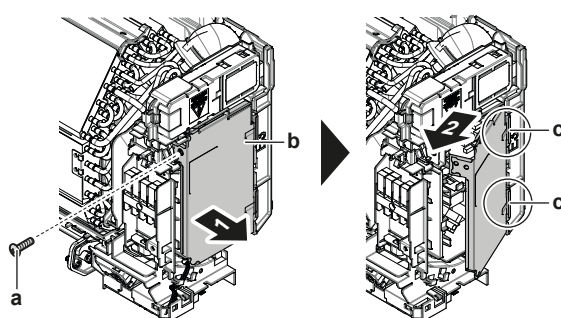

- a Screw  
b Electrical wiring box  
c Rear hook

- 4 To re-install the cover, first attach the electrical wiring box to the hooks, close the electrical wiring box, and re-install the screw.

**NOTICE**

When closing the electrical wiring box cover, make sure that the tightening torque does NOT exceed 2.0 ( $\pm 0.2$ ) N•m.


## 6.3 Mounting the indoor unit

In this chapter


|       |                                     |    |
|-------|-------------------------------------|----|
| 6.3.1 | To install the mounting plate.....  | 27 |
| 6.3.2 | To drill a wall hole .....          | 28 |
| 6.3.3 | To remove the pipe port cover ..... | 29 |

### 6.3.1 To install the mounting plate

- 1 Install the mounting plate temporarily.
- 2 Level the mounting plate.
- 3 Mark the centres of the drilling points on the wall using a tape measure. Position the end of tape measure at symbol ">".
- 4 Finish the installation by securing the mounting plate on the wall using M4×25L screws (field supply).

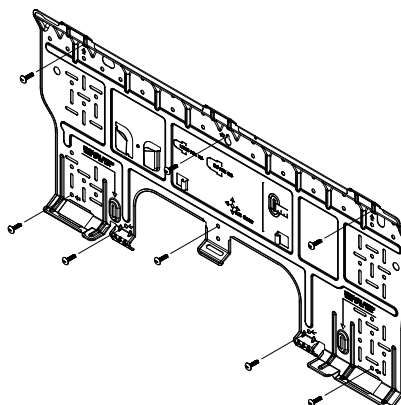**INFORMATION**

The removed pipe port cover can be kept in the mounting plate pocket.

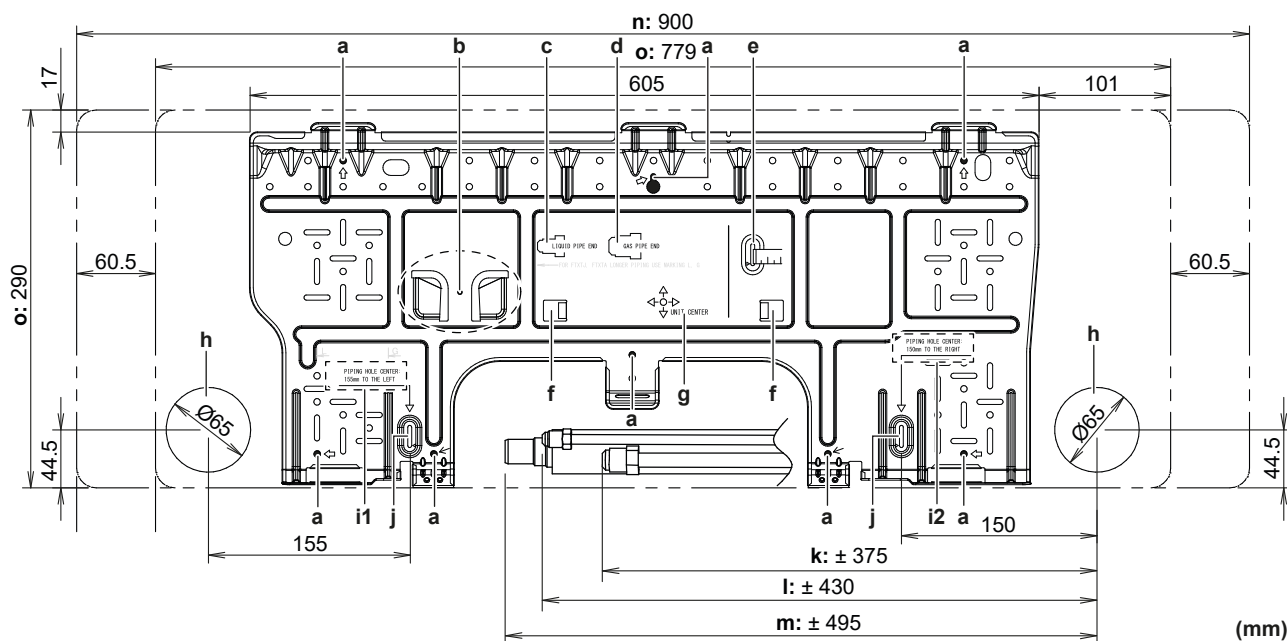

- a Recommended mounting plate fixing spots
- b Pocket for the pipe port cover
- c Liquid pipe end
- d Gas pipe end
- e Use tape measure as shown
- f Tabs for placing a spirit level
- g Unit center
- h Hole for embedded piping Ø65 mm

- i1 Piping hole center is 155 mm to the left
- i2 Piping hole center is 150 mm to the right
- j Position for tape measure at symbol "b"
- k Gas pipe length
- l Liquid pipe length
- m Drain hose length
- n Outline of the unit
- o Outline of the unit's back side

### 6.3.2 To drill a wall hole



#### CAUTION


For walls containing a metal frame or a metal board, use a wall embedded pipe and wall cover in the feed-through hole to prevent possible heat, electrical shock, or fire.



#### NOTICE

Be sure to seal the gaps around the pipes with sealing material (field supply), in order to prevent water leakage.

- 1 Bore a 65 mm large feed-through hole in the wall with a downward slope towards the outside.
- 2 Insert a wall embedded pipe into the hole.
- 3 Insert a wall cover into the wall pipe.

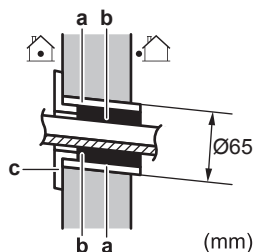

- a Wall embedded pipe
- b Putty
- c Wall hole cover


- 4 After completing wiring, refrigerant piping and drain piping, do NOT forget to seal the gap with putty.

## 6.3.3 To remove the pipe port cover


**INFORMATION**

To connect the piping on right-side, right-bottom, left-side or left-bottom, the pipe port cover **MUST** be removed.

- 1 Cut off the pipe port cover from inside the front grille using a coping saw.

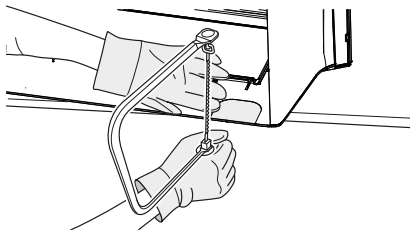

- 2 Remove any burrs along the cut section using a half round needle file.

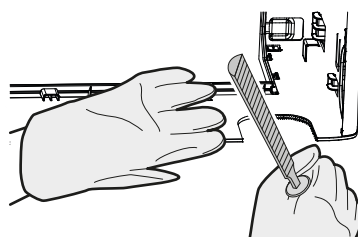**NOTICE**

Do **NOT** use nippers to remove the pipe port cover, as this would damage the front grille.


## 6.4 Connecting the drain piping

 In this chapter


|       |                                                                       |    |
|-------|-----------------------------------------------------------------------|----|
| 6.4.1 | General guidelines .....                                              | 29 |
| 6.4.2 | To connect the piping on right side, right-back, or right-bottom..... | 30 |
| 6.4.3 | To connect the piping on left side, left-back, or left-bottom .....   | 31 |
| 6.4.4 | To check for water leaks .....                                        | 32 |

## 6.4.1 General guidelines


- **Pipe length.** Keep drain piping as short as possible.
- **Pipe size.** If drain hose extension or embedded drain piping is required, use appropriate parts that match the hose front end.

**NOTICE**

- Install the drain hose with a downward slope.
- Traps are **NOT** permitted.
- Do **NOT** put the end of the hose in water.

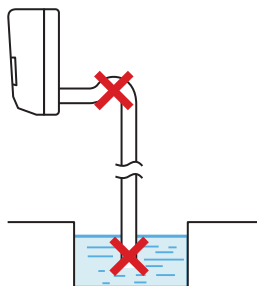


 - **Drain hose extension.** To extend the drain hose, use a field supplied hose with inner  $\varnothing 16$  mm. Do NOT forget to use a heat insulation tube on the indoor section of the extension hose.



- a Drain hose supplied with the indoor unit
- b Heat insulation tube (field supply)
- c Extension drain hose

 
- **Rigid polyvinyl chloride pipe.** When connecting a rigid polyvinyl chloride pipe (nominal  $\varnothing 13$  mm) directly to the drain hose as with embedded piping work, use a field supplied drain socket (nominal  $\varnothing 13$  mm).



- a Drain hose supplied with the indoor unit
- b Drain socket with nominal  $\varnothing 13$  mm (field supply)
- c Rigid polyvinyl chloride pipe (field supply)

- **Condensation.** Take measures against condensation. Insulate the complete drain piping in the building.

- 1 Insert the drain hose in the drain pipe as shown in the following figure, so it will NOT be pulled out of the drain pipe.

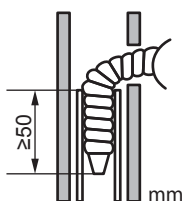


#### 6.4.2 To connect the piping on right side, right-back, or right-bottom



#### INFORMATION

The factory default is right-side piping. For left-side piping, remove the piping from the right side and install it on the left side.

- 1 Attach the drain hose with adhesive vinyl tape to the bottom of the refrigerant pipes.
- 2 Wrap the drain hose and the refrigerant pipes together using insulation tape.

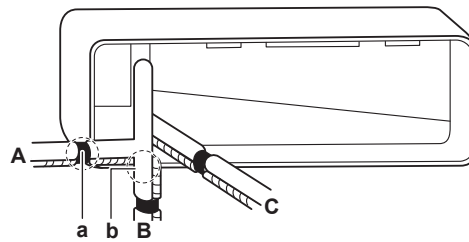

- A Right-side piping
- B Right-bottom piping
- C Right-back piping
- a Remove the pipe port cover here for right side piping
- b Remove the pipe port cover here for right-bottom piping

#### 6.4.3 To connect the piping on left side, left-back, or left-bottom



##### INFORMATION


The factory default is right-side piping. For left-side piping, remove the piping from the right side and install it on the left side.

- 1 Remove the insulation fixing screw on the right side and remove the drain hose.
- 2 Remove the drain plug on the left side and attach it to the right side.




##### NOTICE

Do NOT apply lubricating oil (refrigerant oil) to the drain plug when inserting it. The drain plug may deteriorate and cause drain leakage from the plug.

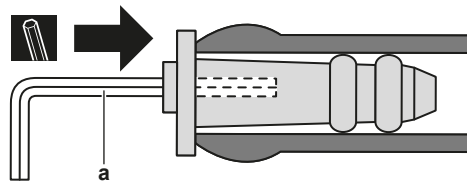


a 4 mm hexagonal wrench

- 3 Insert the drain hose on the left side and do not forget to tighten it with the fixing screw; otherwise water leakage may occur.

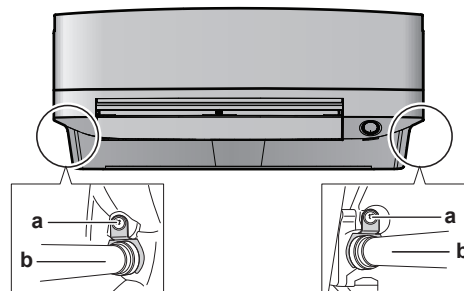

a Insulation fixing screw  
b Drain hose


- 4 Attach the drain hose to the refrigerant piping bottom side using adhesive vinyl tape.

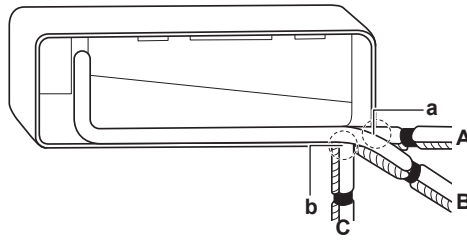

- A** Left-side piping
- B** Left-back piping
- C** Left-bottom piping
- a** Remove the pipe port cover here for left-side piping
- b** Remove the pipe port cover here for left-bottom piping

### 6.4.4 To check for water leaks

- 1** Remove the air filters.
- 2** Gradually pour approximately 1 l of water in the drain pan, and check for water leaks.

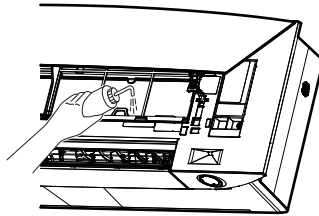

# 7 Piping installation

## In this chapter

|       |                                                                              |    |
|-------|------------------------------------------------------------------------------|----|
| 7.1   | Preparing refrigerant piping.....                                            | 33 |
| 7.1.1 | Refrigerant piping requirements.....                                         | 33 |
| 7.1.2 | Refrigerant piping insulation.....                                           | 34 |
| 7.2   | Connecting the refrigerant piping.....                                       | 34 |
| 7.2.1 | About connecting the refrigerant piping.....                                 | 34 |
| 7.2.2 | Precautions when connecting the refrigerant piping.....                      | 34 |
| 7.2.3 | Guidelines when connecting the refrigerant piping.....                       | 35 |
| 7.2.4 | Pipe bending guidelines.....                                                 | 36 |
| 7.2.5 | To flare the pipe end.....                                                   | 36 |
| 7.2.6 | To connect the refrigerant piping to the indoor unit.....                    | 37 |
| 7.2.7 | To check refrigerant piping joints for leaks after charging refrigerant..... | 37 |

## 7.1 Preparing refrigerant piping

### 7.1.1 Refrigerant piping requirements



#### CAUTION

Piping and joints of a split system shall be made with permanent joints when inside an occupied space except joints directly connecting the piping to the indoor units.



#### NOTICE

The piping and other pressure-containing parts shall be suitable for refrigerant. Use phosphoric acid deoxidised seamless copper for refrigerant piping.



#### INFORMATION

Also read the precautions and requirements in the ["2 General safety precautions"](#) [▶ 7].

- Foreign materials inside pipes (including oils for fabrication) must be ≤30 mg/10 m.

### Refrigerant piping diameter

Use the same diameters as the connections on the outdoor units:

| Class | Pipe outer diameter (mm) |          |
|-------|--------------------------|----------|
|       | Liquid pipe              | Gas pipe |
| 20~35 | Ø6.4                     | Ø9.5     |
| 42+50 | Ø6.4                     | Ø12.7    |

### Refrigerant piping material

- Piping material:** phosphoric acid deoxidised seamless copper
- Flare connections:** Only use annealed material.
- Piping temper grade and thickness:**

 
| Outer diameter (Ø) | Temper grade | Thickness (t) <sup>(a)</sup> |                                                                                       |
|--------------------|--------------|------------------------------|---------------------------------------------------------------------------------------|
| 6.4 mm (1/4")      | Annealed (O) | ≥0.8 mm                      |  |
| 9.5 mm (3/8")      |              |                              |                                                                                       |
| 12.7 mm (1/2")     |              |                              |                                                                                       |

<sup>(a)</sup> Depending on the applicable legislation and the maximum working pressure of the unit (see "PS High" on the unit name plate), larger piping thickness might be required.

### 7.1.2 Refrigerant piping insulation

- Use polyethylene foam as insulation material:
  - with a heat transfer rate between 0.041 and 0.052 W/mK (0.035 and 0.045 kcal/mh°C)
  - with a heat resistance of at least 120°C
- Insulation thickness:

| Pipe outer diameter ( $\varnothing_p$ ) | Insulation inner diameter ( $\varnothing_i$ ) | Insulation thickness (t) |
|-----------------------------------------|-----------------------------------------------|--------------------------|
| 6.4 mm (1/4")                           | 8~10 mm                                       | ≥10 mm                   |
| 9.5 mm (3/8")                           | 12~15 mm                                      | ≥13 mm                   |
| 12.7 mm (1/2")                          | 14~16 mm                                      | ≥13 mm                   |



If the temperature is higher than 30°C and the humidity is higher than RH 80%, the thickness of the insulation materials should be at least 20 mm to prevent condensation on the surface of the insulation.

## 7.2 Connecting the refrigerant piping

### 7.2.1 About connecting the refrigerant piping

#### Before connecting the refrigerant piping

Make sure the outdoor and indoor unit are mounted.

#### Typical workflow

Connecting the refrigerant piping involves:

- Connecting the refrigerant piping to the indoor unit
- Connecting the refrigerant piping to the outdoor unit
- Insulating the refrigerant piping
- Keeping in mind the guidelines for:
  - Pipe bending
  - Flaring pipe ends
  - Using the stop valves

### 7.2.2 Precautions when connecting the refrigerant piping



#### INFORMATION

Also read the precautions and requirements in the following chapters:

- "2 General safety precautions" [▶ 7]
- "7.1 Preparing refrigerant piping" [▶ 33]

**DANGER: RISK OF BURNING/SCALDING****NOTICE**

- Use the flare nut fixed to the unit.
- To prevent gas leakage, apply refrigeration oil **ONLY** to the inside of the flare. Use refrigeration oil for R32 (FW68DA).
- Do **NOT** reuse joints.


**NOTICE**

- Do **NOT** use mineral oil on flared part.
- **NEVER** install a drier to this R32 unit to guarantee its lifetime. The drying material may dissolve and damage the system.

**NOTICE**

Take the following precautions on refrigerant piping into account:

- Avoid anything but the designated refrigerant to get mixed into the refrigerant cycle (e.g. air).
- Only use R32 when adding refrigerant.
- Only use installation tools (e.g. manifold gauge set) that are exclusively used for R32 installations to withstand the pressure and to prevent foreign materials (e.g. mineral oils and moisture) from mixing into the system.
- Install the piping so that the flare is **NOT** subjected to mechanical stress.
- Do **NOT** leave pipes unattended at the site. If the installation is **NOT** done within 1 day, protect the piping as described in the following table to prevent dirt, liquid or dust from entering the piping.
- Use caution when passing copper tubes through walls (see figure below).

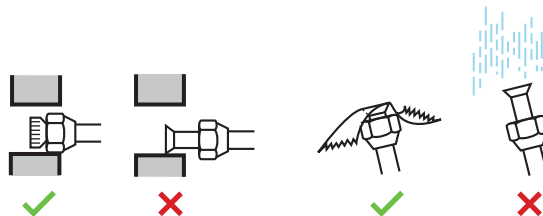

| Unit         | Installation period      | Protection method      |
|--------------|--------------------------|------------------------|
| Outdoor unit | >1 month                 | Pinch the pipe         |
|              | <1 month                 | Pinch or tape the pipe |
| Indoor unit  | Regardless of the period |                        |

**NOTICE**

Do **NOT** open the refrigerant stop valve before checking the refrigerant piping. When you need to charge additional refrigerant it is recommended to open the refrigerant stop valve after charging.


### 7.2.3 Guidelines when connecting the refrigerant piping

Take the following guidelines into account when connecting pipes:

- Coat the flare inner surface with ether oil or ester oil when connecting a flare nut. Tighten 3 or 4 turns by hand, before tightening firmly.



- ALWAYS use 2 wrenches together when loosening a flare nut.
- ALWAYS use a spanner and torque wrench together to tighten the flare nut when connecting the piping. This to prevent nut cracking and leaks.

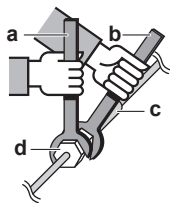

- a Torque wrench
- b Spanner
- c Piping union
- d Flare nut

| Piping size (mm) | Tightening torque (N•m) | Flare dimensions (A) (mm) | Flare shape (mm) |
|------------------|-------------------------|---------------------------|------------------|
| Ø6.4             | 15~17                   | 8.7~9.1                   |                  |
| Ø9.5             | 33~39                   | 12.8~13.2                 |                  |
| Ø12.7            | 50~60                   | 16.2~16.6                 |                  |

### 7.2.4 Pipe bending guidelines

Use a pipe bender for bending. All pipe bends should be as gentle as possible (bending radius should be 30~40 mm or larger).


### 7.2.5 To flare the pipe end



#### CAUTION

- Incomplete flaring may cause refrigerant gas leakage.
- Do NOT re-use flares. Use new flares to prevent refrigerant gas leakage.
- Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

- 1 Cut the pipe end with a pipe cutter.
- 2 Remove burrs with the cut surface facing down so that the chips do NOT enter the pipe.

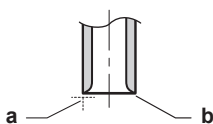


- a Cut exactly at right angles.
- b Remove burrs.

- 3 Remove the flare nut from the stop valve and put the flare nut on the pipe.
- 4 Flare the pipe. Set exactly at the position as shown in the following figure.



|   | Flare tool for R32<br>(clutch type) | Conventional flare tool      |                                  |
|---|-------------------------------------|------------------------------|----------------------------------|
|   |                                     | Clutch type<br>(Ridgid-type) | Wing nut type<br>(Imperial-type) |
| A | 0~0.5 mm                            | 1.0~1.5 mm                   | 1.5~2.0 mm                       |

5 Check that the flaring is properly made.

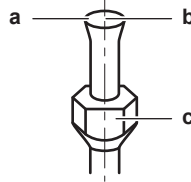

- a Flare's inner surface MUST be flawless.
- b The pipe end MUST be evenly flared in a perfect circle.
- c Make sure the flare nut is fitted.

7.2.6 To connect the refrigerant piping to the indoor unit




A2L

**WARNING: MILDLY FLAMMABLE MATERIAL**

The refrigerant inside this unit is mildly flammable.

▪ **Pipe length.** Keep refrigerant piping as short as possible.

- 1 Connect refrigerant piping to the unit using **flare connections**.
- 2 Wrap the refrigerant piping connection using vinyl tape, overlapping at least half the width of the tape with each turn. Keep the slit of the heat insulation pipe cover up. Avoid wrapping the tape too tight.

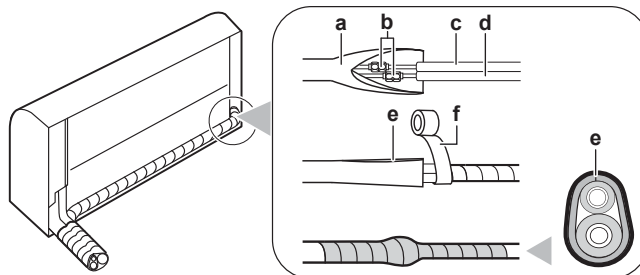

- a Heat insulation pipe cover (on the indoor unit side)
- b Flare connections
- c Liquid pipe (with insulation) (field supply)
- d Gas pipe (with insulation) (field supply)
- e Slit on heat insulation pipe cover facing up
- f Vinyl tape (field supply)

- 3 **Insulate** the refrigerant piping, interconnection cable and drain hose on the indoor unit: See ["9.1 To insulate the drain piping, refrigerant piping and interconnection cable"](#) [▶ 45].



**NOTICE**

Make sure to insulate all refrigerant piping. Any exposed piping might cause condensation.

7.2.7 To check refrigerant piping joints for leaks after charging refrigerant

- 1 Perform the leak tests according to instructions in the outdoor unit installation manual.
- 2 Charge refrigerant.

- 3 Check for refrigerant leaks after charging (see below).

### **Tightness test of field-made refrigerant joints indoors**

- 1 Use a leakage test method with a minimum sensitivity of 5 g of refrigerant/year. Test leaks using a pressure of at least 0.25 times the maximum working pressure (see "PS High" on the unit nameplate).

### **If a leak is detected**

- 1 Recover the refrigerant, repair the joint, and repeat the test.

# 8 Electrical installation

## In this chapter

|       |                                                                                            |    |
|-------|--------------------------------------------------------------------------------------------|----|
| 8.1   | About connecting the electrical wiring .....                                               | 39 |
| 8.1.1 | Precautions when connecting the electrical wiring .....                                    | 39 |
| 8.1.2 | Guidelines when connecting the electrical wiring .....                                     | 40 |
| 8.1.3 | Specifications of standard wiring components .....                                         | 42 |
| 8.2   | To connect the electrical wiring to the indoor unit .....                                  | 42 |
| 8.3   | To connect optional accessories (wired user interface, central user interface, etc.) ..... | 43 |

## 8.1 About connecting the electrical wiring

### Before connecting the electrical wiring

Make sure the refrigerant piping is connected and checked.

### Typical workflow

Connecting the electrical wiring typically consists of the following stages:

- 1 Making sure the power supply system complies with the electrical specifications of the units.
- 2 Connecting the electrical wiring to the outdoor unit.
- 3 Connecting the electrical wiring to the indoor unit.
- 4 Connecting the main power supply.

### 8.1.1 Precautions when connecting the electrical wiring



#### DANGER: RISK OF ELECTROCUTION



#### WARNING

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.



#### WARNING

ALWAYS use multicore cable for power supply cables.



#### INFORMATION

Also read the precautions and requirements in the "[2 General safety precautions](#)" [▶ 7].



#### INFORMATION

Also read "[8.1.3 Specifications of standard wiring components](#)" [▶ 42].



### WARNING

- If the power supply has a missing or wrong N-phase, equipment might break down.
- Establish proper earthing. Do NOT earth the unit to a utility pipe, surge absorber, or telephone earth. Incomplete earthing may cause electrical shocks.
- Install the required fuses or circuit breakers.
- Secure the electrical wiring with cable ties so that the cables do NOT come in contact with sharp edges or piping, particularly on the high-pressure side.
- Do NOT use taped wires, extension cords, or connections from a star system. They can cause overheating, electrical shocks or fire.
- Do NOT install a phase advancing capacitor, because this unit is equipped with an inverter. A phase advancing capacitor will reduce performance and may cause accidents.



### WARNING

Use an all-pole disconnection type breaker with at least 3 mm between the contact point gaps that provides full disconnection under overvoltage category III.



### WARNING

If the supply cord is damaged, it MUST be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



### WARNING

Do NOT connect the power supply to the indoor unit. This could result in electrical shock or fire.



### WARNING

- Do NOT use locally purchased electrical parts inside the product.
- Do NOT branch the power supply for the drain pump, etc. from the terminal block. This could result in electrical shock or fire.



### WARNING

Keep the interconnection wiring away from copper pipes without thermal insulation as such pipes will be very hot.

## 8.1.2 Guidelines when connecting the electrical wiring




### NOTICE

We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal.

### To prepare stranded conductor wire for installation


#### Method 1: Twisting conductor

- 1 Strip insulation (20 mm) from the wires.
- 2 Slightly twist the end of the conductor to create a "solid-like" connection.

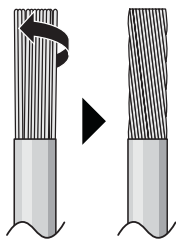

**Method 2: Using round crimp-style terminal (recommended)**

- 1 Strip insulation from wires and slightly twist the end of each wire.
- 2 Install a round crimp-style terminal on the end of the wire. Place the round crimp-style terminal on the wire up to the covered part and fasten the terminal with the appropriate tool.

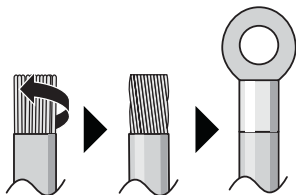

Use the following methods for installing wires:

| Wire type                                                                            | Installation method                                                                                                                              |
|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Single-core wire<br>Or<br>Stranded conductor wire twisted to "solid-like" connection | <div></div> <div></div> <p><b>a</b> Curled wire (single-core or twisted stranded conductor wire)<br/><b>b</b> Screw<br/><b>c</b> Flat washer</p> |
| Stranded conductor wire with round crimp-style terminal                              | <div></div> <div></div> <p><b>a</b> Terminal<br/><b>b</b> Screw<br/><b>c</b> Flat washer<br/>✓ Allowed<br/>✗ NOT allowed</p>                     |

- The earth wire between the wire retainer and the terminal must be longer than the other wires.



### 8.1.3 Specifications of standard wiring components

| Component                                 |           |                                                                                                                                                                                  |
|-------------------------------------------|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Interconnection cable<br>(indoor↔outdoor) | Voltage   | 220~240 V                                                                                                                                                                        |
|                                           | Wire size | Only use harmonized wire providing double insulation and suitable for applicable voltage<br><br>4-core cable<br>1.5 mm <sup>2</sup> ~2.5 mm <sup>2</sup> (based on outdoor unit) |

### 8.2 To connect the electrical wiring to the indoor unit



#### WARNING

Provide adequate measures to prevent that the unit can be used as a shelter by small animals. Small animals that make contact with electrical parts can cause malfunctions, smoke or fire.




#### NOTICE

- Keep power supply wiring and interconnection wiring apart from each other. Interconnection wiring and power supply wiring may cross, but may NOT run parallel.
- In order to avoid any electrical interference, the distance between both wirings should ALWAYS be at least 50 mm.

Electrical work should be carried out in accordance with the installation manual and the national electrical wiring rules or code of practice.

- Set the indoor unit on the mounting plate hooks. Use the "Δ" marks as a guide.

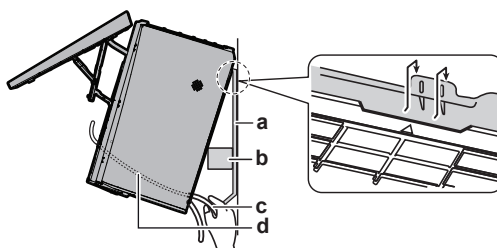


- a Mounting plate (accessory)
- b Piece of packing material
- c Interconnection cable
- d Wire guide



#### INFORMATION

Support the unit using a piece of packing material.


Example:

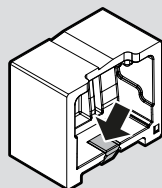

- 2 Open the front panel, and then the service cover. Refer to "6.2 Opening the unit" [▶ 24].
- 3 Pass the interconnection cable from the outdoor unit through the feed-through wall hole, through the back of the indoor unit and through the front side.


**Note:** In case the interconnection cable was stripped in advance, cover the ends with insulating tape.

- 4 Bend the end of the cable up.

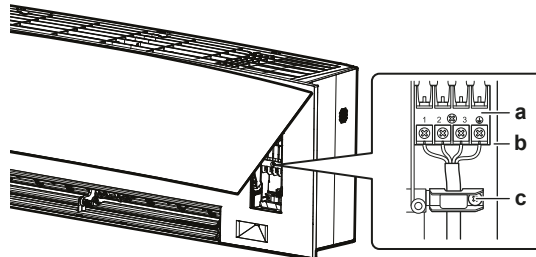


- a Terminal block
- b Electrical component block
- c Cable clamp

- 5 Strip the wire ends approximately 15 mm.
- 6 Match wire colours with terminal numbers on the indoor unit terminal blocks and firmly screw the wires to the corresponding terminals.
- 7 Connect the earth wire to the corresponding terminal.
- 8 Firmly fix the wires with the terminal screws.
- 9 Pull the wires to make sure that they are securely attached, then retain the wires with the wire retainer.
- 10 Shape the wires so that the service cover fits securely, then close the service cover.

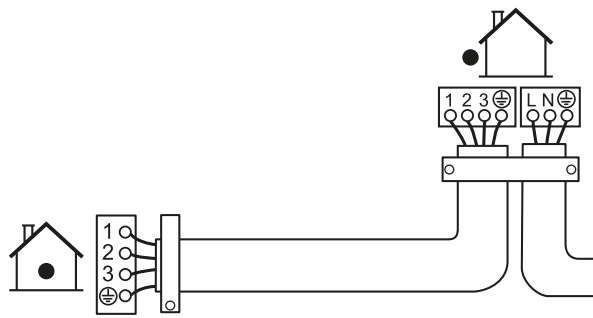

### 8.3 To connect optional accessories (wired user interface, central user interface, etc.)

- 1 Remove the electrical wiring box cover (refer to "6.2.5 To remove the electrical wiring box cover" [▶ 26]).
- 2 Attach the connection cable to the S21 connector and pull the wire harness as shown in the following figure.

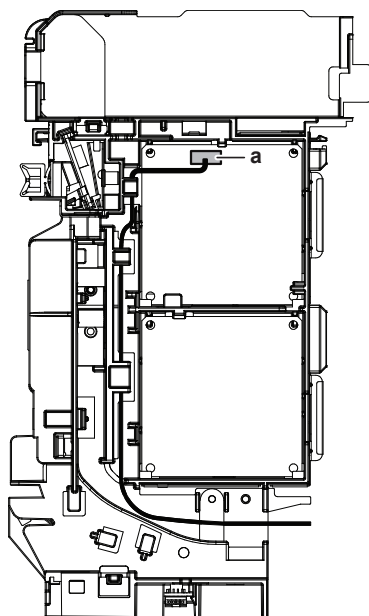


**a** S21 connector

- 3** Put the electrical wiring box cover back and pull the wire harness around it as shown in the figure above.


## 9 Finishing the indoor unit installation

### 9.1 To insulate the drain piping, refrigerant piping and interconnection cable

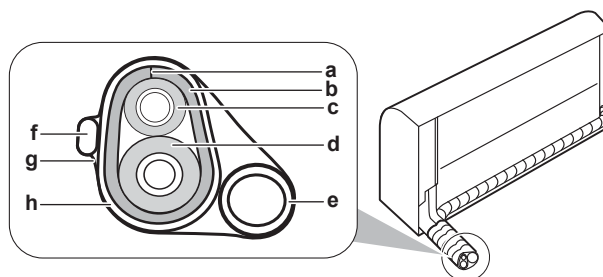

- a Slit
- b Heat insulation pipe cover
- c Liquid pipe
- d Gas pipe
- e Drain pipe
- f Interconnection wire
- g Insulation tape
- h Vinyl tape


- 1 After the drain piping, refrigerant piping and the electrical wiring are finished, wrap refrigerant piping, interconnection cable and drain hose together using insulation tape. Overlap at least half the width of the tape with each turn.

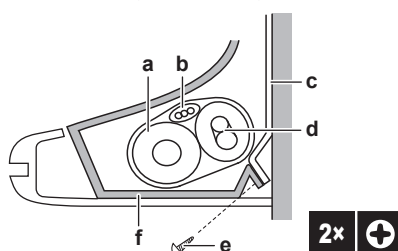

- a Drain hose
- b Interconnection cable
- c Mounting plate (accessory)
- d Refrigerant piping
- e Indoor unit fixing screw M4×12L (accessory)
- f Bottom frame

### 9.2 To pass the pipes through the wall hole

- 1 Shape the refrigerant pipes along the pipe path marking on the mounting plate.

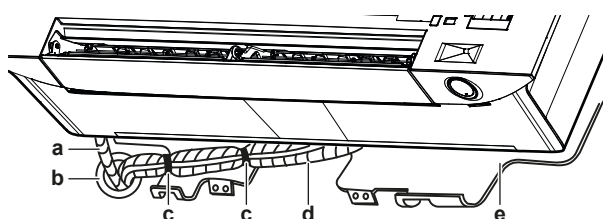


- a Drain hose
- b Caulk this hole with putty or caulking material
- c Adhesive vinyl tape
- d Insulation tape
- e Mounting plate (accessory)



### NOTICE


- Do NOT bend refrigerant pipes.
- Do NOT push the refrigerant pipes onto the bottom frame or the front grille.

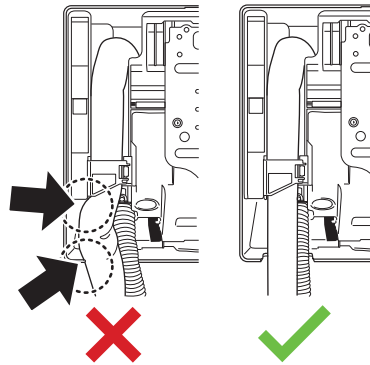

- Pass the drain hose and refrigerant piping through the wall hole and seal the gap with a putty.

### 9.3 To fix the unit on the mounting plate

 - Set the indoor unit on the mounting plate hooks. Use the "Δ" marks as a guide.



- Press the bottom frame of the unit with both hands to set it on the bottom hooks of the mounting plate. Make sure that the wires do NOT get squeezed anywhere.

**Note:** Take care that the interconnection cable does NOT get caught in the indoor unit.

- Press the bottom edge of the indoor unit with both hands until it is firmly caught by the mounting plate hooks.
- Secure the indoor unit to the mounting plate using 2 indoor unit fixing screws M4×12L (accessory).

### 9.4 Closing the unit

#### 9.4.1 To re-install the front grille

- Install the front grille and firmly engage the 3 upper hooks.
- Tighten the 2 screws and put the 2 screw covers back.
- Re-install the flap.
- Insert the wire harness back into the connector and secure it with the wire clamp.
- Close the front panel. Refer to ["9.4.4 To close the front panel"](#) [▶ 47].

#### 9.4.2 To close the service cover

- Place the service cover to its original place on the unit.

- 2 Install 1 screw back on the service cover.

**NOTICE**


When closing the service cover, make sure that the tightening torque does NOT exceed 1.4 ( $\pm 0.2$ ) N•m.

## 9.4.3 To re-install the front panel

- 1 Attach the front panel.
- 2 Align the shaft on right side with the shaft slot and insert it all the way in.
- 3 Push lightly the front panel to the right side, align the shaft on the left side with slot and insert it all the way in.
- 4 Close the locks on both sides.


## 9.4.4 To close the front panel

- 1 Lift the front panel slightly and remove the support from the fixing tab.

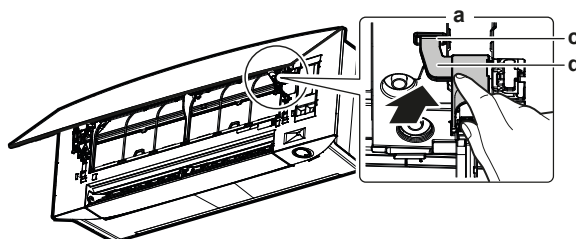

- a Backside of the front panel
- b Fixing tab
- c Support


- 2 Close the front panel.

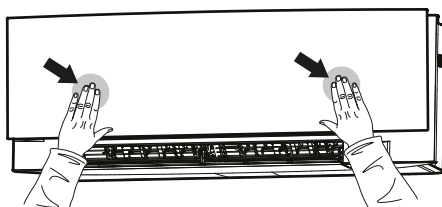

- 3 Gently press the front panel down until it clicks.

## 9.4.5 To install the screw covers

- 1 Open the front panel and turn the flap up.
- 2 Install both screw covers (1 on each side).

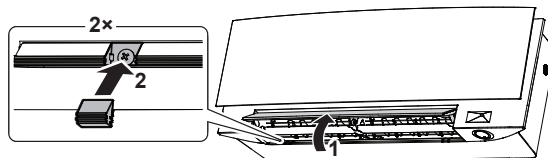

- 3 Return flap to its original position and close the front panel.

# 10 Commissioning



## NOTICE

**General commissioning checklist.** Next to the commissioning instructions in this chapter, a general commissioning checklist is also available on the Daikin Business Portal (authentication required).

The general commissioning checklist is complementary to the instructions in this chapter and can be used as a guideline and reporting template during commissioning and hand-over to the user.

## 10.1 Overview: Commissioning

This chapter describes what you have to do and know to commission the system after it is installed.

### Typical workflow

Commissioning typically consists of the following stages:

- 1 Checking the "Checklist before commissioning".
- 2 Performing a test run for the system.

## 10.2 Checklist before commissioning

- 1 After the installation of the unit, check the items listed below.
- 2 Close the unit.
- 3 Power up the unit.

|                          |                                                                                                                                                 |
|--------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> | You read the complete installation instructions, as described in the <b>installer reference guide</b> .                                         |
| <input type="checkbox"/> | The <b>indoor units</b> are properly mounted.                                                                                                   |
| <input type="checkbox"/> | The <b>outdoor unit</b> is properly mounted.                                                                                                    |
| <input type="checkbox"/> | <b>Air inlet/outlet</b><br>Check that the air inlet and outlet of the unit is NOT obstructed by paper sheets, cardboard, or any other material. |
| <input type="checkbox"/> | There are NO <b>missing phases</b> or <b>reversed phases</b> .                                                                                  |
| <input type="checkbox"/> | The <b>refrigerant pipes</b> (gas and liquid) are thermally insulated.                                                                          |
| <input type="checkbox"/> | <b>Drainage</b><br>Make sure drainage flows smoothly.<br><b>Possible consequence:</b> Condensate water might drip.                              |
| <input type="checkbox"/> | The system is properly <b>earthed</b> and the earth terminals are tightened.                                                                    |
| <input type="checkbox"/> | The <b>fuses</b> or locally installed protection devices are installed according to this document, and have NOT been bypassed.                  |
| <input type="checkbox"/> | The <b>power supply voltage</b> matches the voltage on the identification label of the unit.                                                    |
| <input type="checkbox"/> | The specified wires are used for the <b>interconnection cable</b> .                                                                             |
| <input type="checkbox"/> | The indoor unit receives the signals of the <b>user interface</b> .                                                                             |
| <input type="checkbox"/> | There are NO <b>loose connections</b> or damaged electrical components in the switch box.                                                       |

|                          |                                                                                                                |
|--------------------------|----------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> | The <b>insulation resistance</b> of the compressor is OK.                                                      |
| <input type="checkbox"/> | There are NO <b>damaged components</b> or <b>squeezed pipes</b> on the inside of the indoor and outdoor units. |
| <input type="checkbox"/> | There are NO <b>refrigerant leaks</b> .                                                                        |
| <input type="checkbox"/> | The correct pipe size is installed and the <b>pipes</b> are properly insulated.                                |
| <input type="checkbox"/> | The <b>stop valves</b> (gas and liquid) on the outdoor unit are fully open.                                    |

## 10.3 To perform a test run

**Prerequisite:** The power supply MUST be in the specified range.

**Prerequisite:** Test run may be performed in cooling or heating mode.

**Prerequisite:** Refer to the operation manual of the indoor unit for setting temperature, operation mode....

- 1 In cooling mode, select the lowest programmable temperature. In heating mode, select the highest programmable temperature. The test run can be disabled if necessary.
- 2 When the test run is finished, set the temperature to a normal level. In cooling mode: 26~28°C, in heating mode: 20~24°C.
- 3 Make sure that all functions and parts are working properly.
- 4 The system stops operating 3 minutes after the unit is turned OFF.


### 10.3.1 To perform a test run using the wireless remote control

- 1 Press  to enter main menu and navigate to "Wireless remote control settings menu" by  and . Press  to enter menu.
- 2 Navigate to "Software and version" screen by  and .
- 3 Keep pressed  for at least 5 seconds to enter "Self-diagnosis menu".

#### Wireless remote control setting menu



#### Self-diagnosis menu

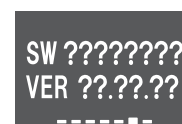


- 4 In the "Self-diagnosis menu", navigate to "Test run menu" by  and .

#### Test run menu



- 5 Press  to enter the menu.
- 6 Change status to ON by  and .
- 7 Press  to confirm the selection.

**Result:** The indoor unit enter test run mode, during which normal operation is not possible.

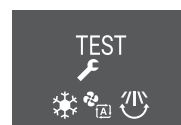**Test run OFF****Test run ON****During test run**

**Result:** Test run operation will stop automatically after about 30 minutes.

- 8 Test run mode will stop if the ON/OFF button is pressed.

**Result:** The indoor units leave test operation mode.

- 9 Check the function of operation modes.

**INFORMATION**

You CANNOT set the Econo, Outdoor unit silent and Powerful operation or change the temperature setpoint during the test run.

- 10 Check the error code history. If required, solve the cause of the errors and perform the test operation again.

**INFORMATION**

- The test run is only completed if the indoor unit does not report any error code.
- See the service manual for the complete list of error codes and a detailed troubleshooting guideline for each error.

# 11 Configuration



## INFORMATION

For “Configuration” using the wireless remote control, refer to the **user reference guide** located on <https://qr.daikin.eu/?N=FTXJ-AW> under “Documentation”.



- **Indoor unit setting:** brightness of the Daikin eye, open the front panel, wireless LAN connection, vertical airflow function, indoor unit installation position, keep dry function
- **Wireless remote control setting:** LCD contrast, LCD brightness, LCD turn off time, automatic send after select, channels of the indoor unit infrared receiver

## 12 Hand-over to the user

Once the test run is finished and the unit operates properly, make sure the following is clear for the user:

- Make sure that the user has the printed documentation and ask him/her to keep it for future reference. Inform the user that he can find the complete documentation at the URL mentioned earlier in this manual.
- Explain the user how to properly operate the system and what to do in case of problems.
- Show the user what to do for the maintenance of the unit.

# 13 Troubleshooting

## 13.1 Solving problems based on error codes


### Fault diagnosis by the wireless remote control

If the unit runs into a problem, you can identify the fault by checking the error code by the wireless remote control. It is important to understand the problem and take measures before resetting the error code. This should be done by a licensed installer or your local dealer.

### To check the error code by the wireless remote control

- 1 Press to enter the main menu and navigate to the wireless remote control settings menu using and .

#### Wireless remote control setting menu    Software version (self-diagnosis menu)

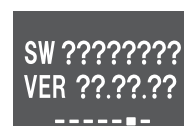

- 2 Press to enter the menu.
- 3 Navigate to the software and version screen using and .
- 4 Keep pressed for at least 5 seconds to enter the self-diagnosis menu.
- 5 Navigate to the error code indication screen using and . Press to confirm your selection.

#### Error code indication



#### Error code list



- 6 Aim the wireless remote control at the unit and scroll through the list of error codes using and , until you hear a long beep.

**Result:** A long beep indicates the corresponding error code.

- 7 Press to return to the home screen or press to return to the self-diagnosis menu.



#### INFORMATION

See the service manual for:

- The complete list of error codes
- A more detailed troubleshooting guideline for each error

| Position | Error code | Description                                                      |
|----------|------------|------------------------------------------------------------------|
| 1        | 00         | Normal                                                           |
| 2        | A5         | Outdoor unit: High pressure peak cut / freeze protection problem |
| 3        | E7         | Outdoor unit: Malfunction of outdoor unit fan motor              |
| 4        | F3         | Outdoor unit: Malfunction of discharge pipe temperature          |

| Position | Error code | Description                                                            |
|----------|------------|------------------------------------------------------------------------|
| 5        | F6         | Outdoor unit: Abnormal high pressure in cooling                        |
| 6        | L3         | Outdoor unit: Electrical box temperature rise problem                  |
| 7        | L4         | Outdoor unit: Malfunction of inverter radiating fin temperature rise   |
| 8        | L5         | Outdoor unit: Inverter instantaneous overcurrent                       |
| 9        | U4         | Indoor/outdoor unit communication problem                              |
| 10       | E6         | Outdoor unit: Compressor startup defect                                |
| 11       | H6         | Outdoor unit: Malfunction of position detection sensor                 |
| 12       | H0         | Outdoor unit: Voltage/current sensor problem                           |
| 13       | A6         | Indoor unit fan motor abnormality                                      |
| 14       | U0         | Outdoor unit: Shortage of refrigerant                                  |
| 15       | C7         | Indoor unit: Opening or closing front panel error                      |
| 16       | A3         | Indoor unit: Drain level control system abnormality                    |
| 17       | H8         | Outdoor unit: Malfunction of compressor input system                   |
| 18       | H9         | Outdoor unit: Malfunction of outdoor air thermistor                    |
| 19       | C9         | Room thermistor abnormality                                            |
| 20       | CC         | Humidity sensor abnormality                                            |
| 21       | C4         | Heat exchanger temperature sensor problem                              |
| 22       | C5         | Gas pipe thermistor for heat exchanger problem                         |
| 23       | J3         | Outdoor unit: Malfunction of discharge pipe thermistor                 |
| 24       | J6         | Outdoor unit: Malfunction of heat exchanger thermistor                 |
| 25       | J8         | Refrigerant circuit thermistor problem                                 |
| 26       | E5         | Outdoor unit: Overheat of inverter compressor motor                    |
| 27       | A1         | PCB abnormality                                                        |
| 28       | E1         | Outdoor unit: PCB defect                                               |
| 29       | UA         | Indoor unit, outdoor unit mismatching problem                          |
| 30       | U3         | Check operation not executed or transmission error                     |
| 31       | UH         | Malfunction of system                                                  |
| 32       | P4         | Outdoor unit: Malfunction of radiating fin temperature sensor          |
| 33       | H7         | Outdoor unit: Malfunction of outdoor unit fan motor signal             |
| 34       | U2         | Outdoor unit: Defect of power supply voltage                           |
| 35       | EA         | Outdoor unit: Cool/heat switchover problem                             |
| 36       | AH         | Indoor unit: Streamer unit abnormality                                 |
| 37       | FA         | Outdoor unit: Abnormal high pressure actuation of high pressure switch |
| 38       | E3         | Outdoor unit: Actuation of high pressure switch                        |
| 39       | H3         | Outdoor unit: Malfunction of high pressure switch                      |

| Position | Error code | Description                                                        |
|----------|------------|--------------------------------------------------------------------|
| 40       | F8         | System shutdown due to compressor internal temperature abnormality |
| 41       | E8         | Outdoor unit: Power input overvoltage                              |
| 42       | P9         | Outdoor unit: Automatic refrigerant charge operation completed     |

## 14 Disposal



### NOTICE

Do NOT try to dismantle the system yourself: dismantling of the system, treatment of the refrigerant, oil and other parts **MUST** comply with applicable legislation. Units **MUST** be treated at a specialised treatment facility for reuse, recycling and recovery.

# 15 Technical data

 
 
- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

## 15.1 Wiring diagram

**The wiring diagram is delivered with the unit, located on the inner right side of the indoor unit front grille.**

### 15.1.1 Unified wiring diagram legend

For applied parts and numbering, refer to the wiring diagram on the unit. Part numbering is by Arabic numbers in ascending order for each part and is represented in the overview below by "\*" in the part code.

| Symbol                                                                              | Meaning                 | Symbol                                                                                | Meaning                  |
|-------------------------------------------------------------------------------------|-------------------------|---------------------------------------------------------------------------------------|--------------------------|
|    | Circuit breaker         |    | Protective earth         |
|    |                         |    | Noiseless earth          |
|    |                         |    | Protective earth (screw) |
|  | Connection              |  | Rectifier                |
|  | Connector               |  | Relay connector          |
|  | Earth                   |  | Short-circuit connector  |
|  | Field wiring            |  | Terminal                 |
|  | Fuse                    |  | Terminal strip           |
|  | Indoor unit             |  | Wire clamp               |
|  | Outdoor unit            |  | Heater                   |
|  | Residual current device |                                                                                       |                          |

| Symbol  | Colour   | Symbol   | Colour |
|---------|----------|----------|--------|
| BLK     | Black    | ORG      | Orange |
| BLU     | Blue     | PNK      | Pink   |
| BRN     | Brown    | PRP, PPL | Purple |
| GRN     | Green    | RED      | Red    |
| GRY     | Grey     | WHT      | White  |
| SKY BLU | Sky blue | YLW      | Yellow |

| Symbol  | Meaning                             |
|---------|-------------------------------------|
| A*P     | Printed circuit board               |
| BS*     | Pushbutton ON/OFF, operation switch |
| BZ, H*O | Buzzer                              |

| Symbol                                                                           | Meaning                                      |
|----------------------------------------------------------------------------------|----------------------------------------------|
| C*                                                                               | Capacitor                                    |
| AC*, CN*, E*, HA*, HE*, HL*, HN*, HR*, MR*_A, MR*_B, S*, U, V, W, X*A, K*R_*, NE | Connection, connector                        |
| D*, V*D                                                                          | Diode                                        |
| DB*                                                                              | Diode bridge                                 |
| DS*                                                                              | DIP switch                                   |
| E*H                                                                              | Heater                                       |
| FU*, F*U, (for characteristics, refer to PCB inside your unit)                   | Fuse                                         |
| FG*                                                                              | Connector (frame ground)                     |
| H*                                                                               | Harness                                      |
| H*P, LED*, V*L                                                                   | Pilot lamp, light emitting diode             |
| HAP                                                                              | Light emitting diode (service monitor green) |
| HIGH VOLTAGE                                                                     | High voltage                                 |
| IES                                                                              | Intelligent eye sensor                       |
| IPM*                                                                             | Intelligent power module                     |
| K*R, KCR, KFR, KHuR, K*M                                                         | Magnetic relay                               |
| L                                                                                | Live                                         |
| L*                                                                               | Coil                                         |
| L*R                                                                              | Reactor                                      |
| M*                                                                               | Stepper motor                                |
| M*C                                                                              | Compressor motor                             |
| M*F                                                                              | Fan motor                                    |
| M*P                                                                              | Drain pump motor                             |
| M*S                                                                              | Swing motor                                  |
| MR*, MRCW*, MRM*, MRN*                                                           | Magnetic relay                               |
| N                                                                                | Neutral                                      |
| n=*, N=*                                                                         | Number of passes through ferrite core        |
| PAM                                                                              | Pulse-amplitude modulation                   |
| PCB*                                                                             | Printed circuit board                        |
| PM*                                                                              | Power module                                 |
| PS                                                                               | Switching power supply                       |
| PTC*                                                                             | PTC thermistor                               |
| Q*                                                                               | Insulated gate bipolar transistor (IGBT)     |
| Q*C                                                                              | Circuit breaker                              |
| Q*DI, KLM                                                                        | Earth leak circuit breaker                   |

| Symbol      | Meaning                                                             |
|-------------|---------------------------------------------------------------------|
| Q*L         | Overload protector                                                  |
| Q*M         | Thermo switch                                                       |
| Q*R         | Residual current device                                             |
| R*          | Resistor                                                            |
| R*T         | Thermistor                                                          |
| RC          | Receiver                                                            |
| S*C         | Limit switch                                                        |
| S*L         | Float switch                                                        |
| S*NG        | Refrigerant leak detector                                           |
| S*NPH       | Pressure sensor (high)                                              |
| S*NPL       | Pressure sensor (low)                                               |
| S*PH, HPS*  | Pressure switch (high)                                              |
| S*PL        | Pressure switch (low)                                               |
| S*T         | Thermostat                                                          |
| S*RH        | Humidity sensor                                                     |
| S*W, SW*    | Operation switch                                                    |
| SA*, F1S    | Surge arrester                                                      |
| SR*, WLU    | Signal receiver                                                     |
| SS*         | Selector switch                                                     |
| SHEET METAL | Terminal strip fixed plate                                          |
| T*R         | Transformer                                                         |
| TC, TRC     | Transmitter                                                         |
| V*, R*V     | Varistor                                                            |
| V*R         | Diode bridge, Insulated-gate bipolar transistor (IGBT) power module |
| WRC         | Wireless remote controller                                          |
| X*          | Terminal                                                            |
| X*M         | Terminal strip (block)                                              |
| Y*E         | Electronic expansion valve coil                                     |
| Y*R, Y*S    | Reversing solenoid valve coil                                       |
| Z*C         | Ferrite core                                                        |
| ZF, Z*F     | Noise filter                                                        |

# 16 Glossary

**Dealer**

Sales distributor for the product.

**Authorised installer**

Technical skilled person who is qualified to install the product.

**User**

Person who is owner of the product and/or operates the product.

**Applicable legislation**

All international, European, national and local directives, laws, regulations and/or codes that are relevant and applicable for a certain product or domain.

**Service company**

Qualified company which can perform or coordinate the required service to the product.

**Installation manual**

Instruction manual specified for a certain product or application, explaining how to install, configure and maintain it.

**Operation manual**

Instruction manual specified for a certain product or application, explaining how to operate it.

**Maintenance instructions**

Instruction manual specified for a certain product or application, which explains (if relevant) how to install, configure, operate and/or maintain the product or application.

**Accessories**



Labels, manuals, information sheets and equipment that are delivered with the product and that need to be installed according to the instructions in the accompanying documentation.

**Optional equipment**

Equipment made or approved by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

**Field supply**

Equipment NOT made by Daikin that can be combined with the product according to the instructions in the accompanying documentation.

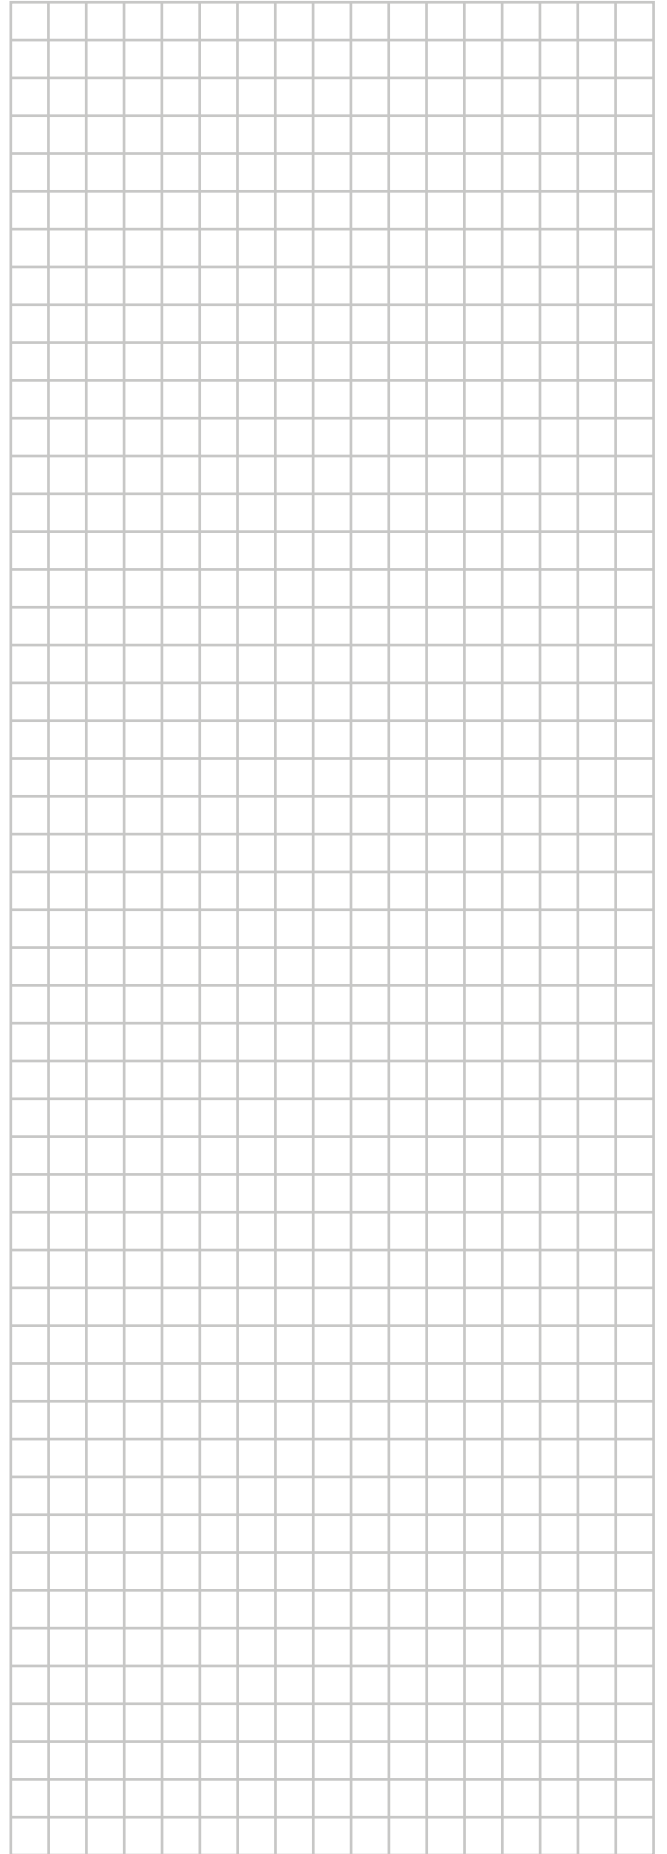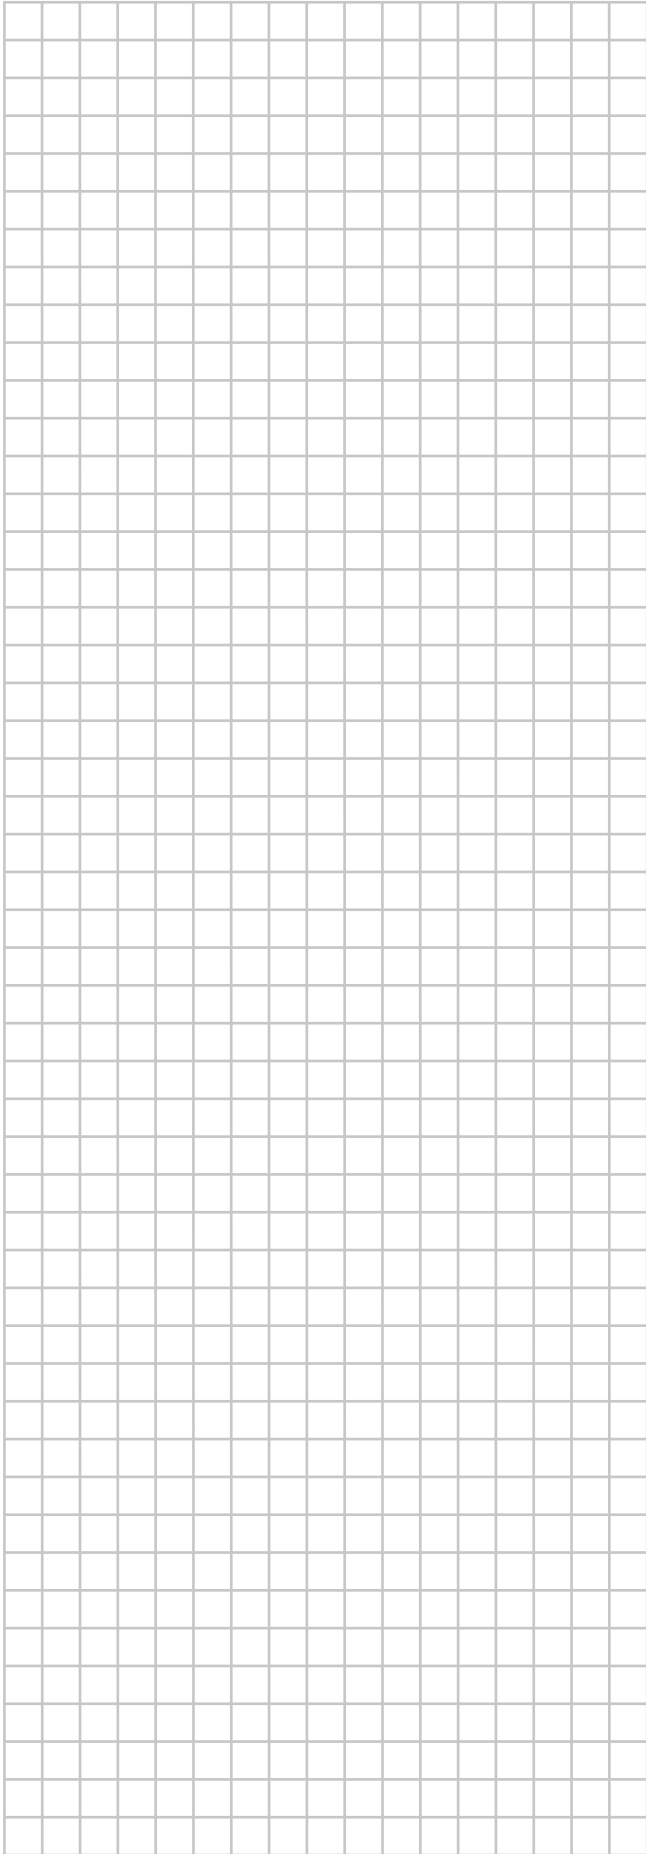





**DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.**

U Nové Hospody 1155/1, 301 00 Plzeň Skvrňany, Czech Republic

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P769827-6C 2024.07